
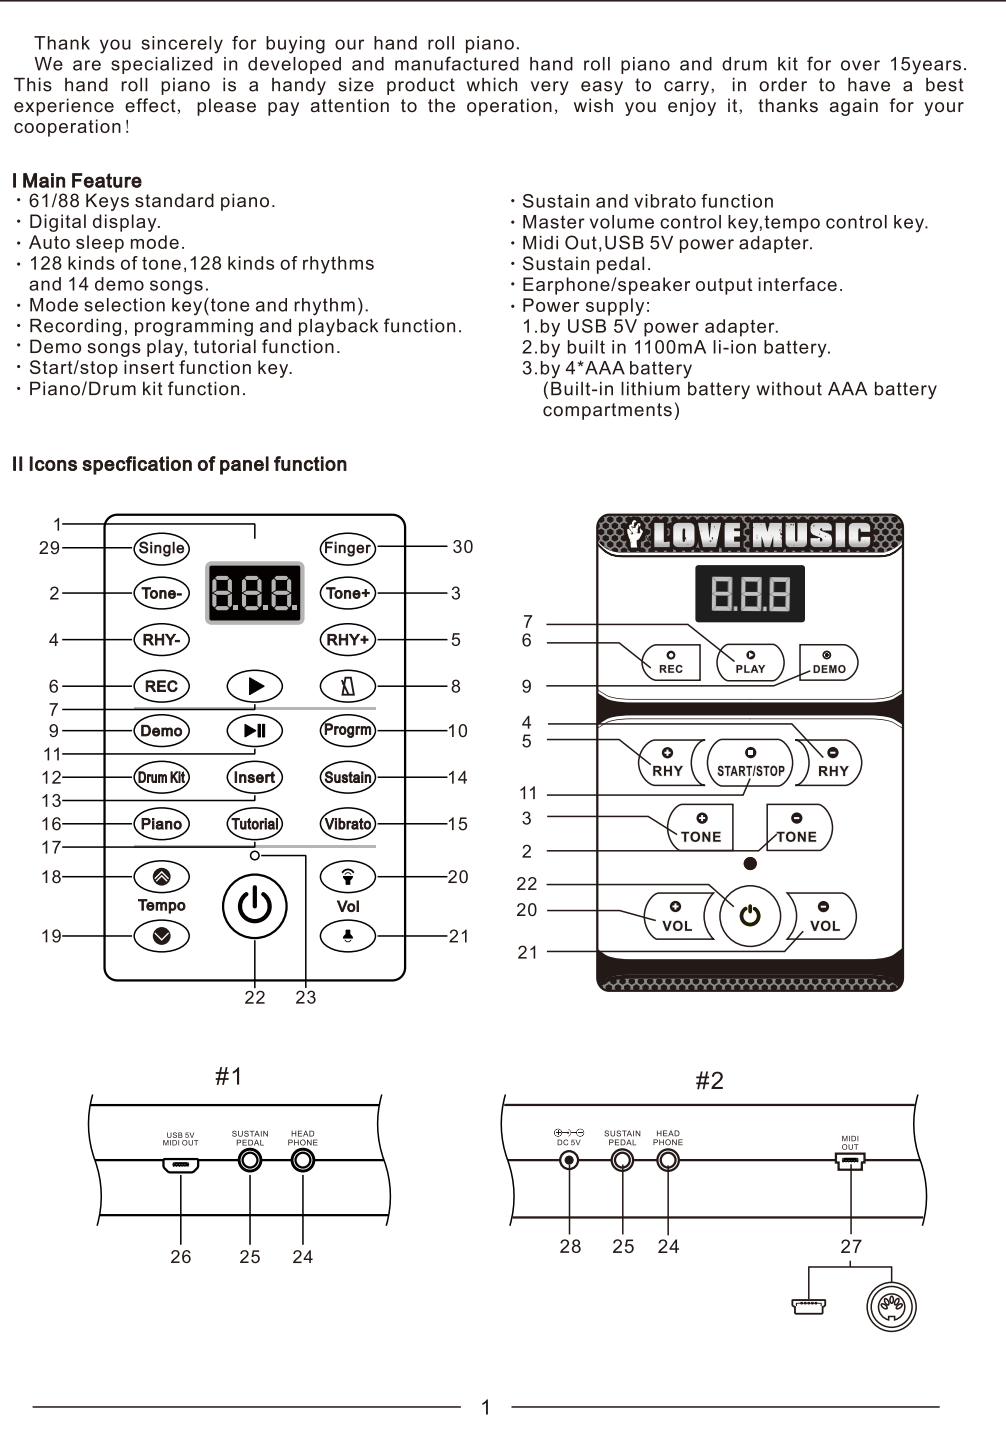


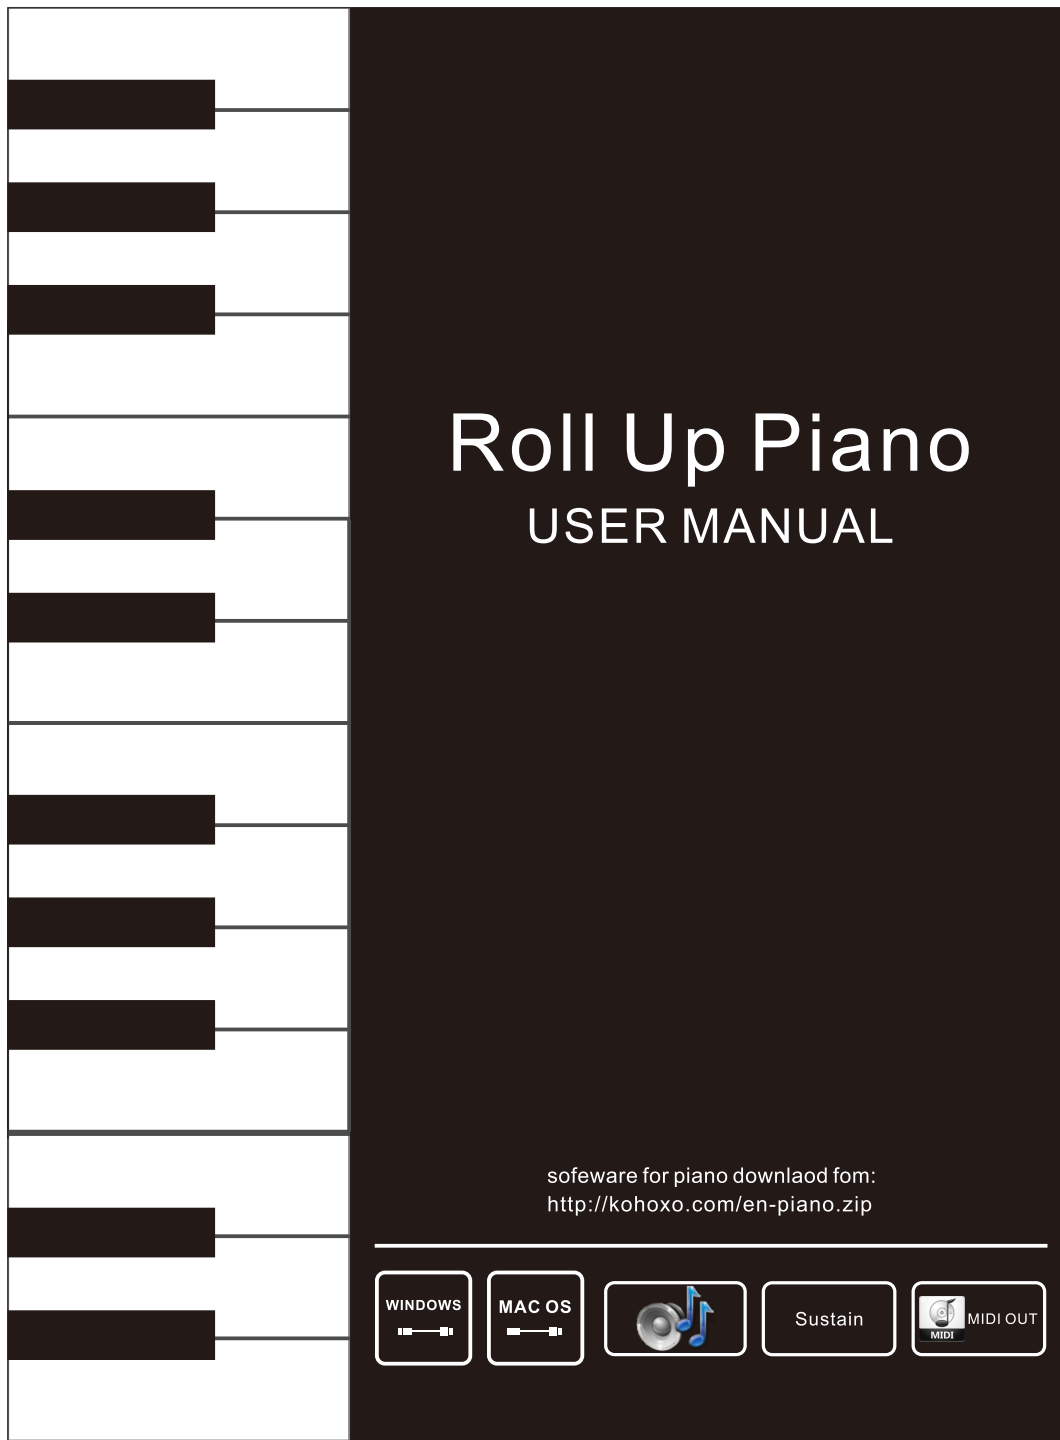

1	LED display	16	Piano	Piano
2	Tone-	17	Tutorial	Tutorial
3	Tone+	18	Tempo Control+	
4	RHY-	19	Tempo Control-	
5	RHY+	20	Volume Control+	
6	REC	21	Volume Control-	
7	Play	22	Power Switch	
8	Metronome	23	LED indicator	
9	Demo	24	Headphone/Speaker interface	
10	Program	25	Sustain input interface	
11	Start/Stop	26	MIDI OUT/USB 5V	
12	Drum Kit	27	MIDI Output interface	
13	Insert	28	Power interface	
14	Sustain	29	Single	Single
15	Vibrato	30	Finger	Finger

6.Program			
• Automatically records rhythm and edit your beats when press button "Program".			
• Press ▶ to program function stoped and play your beats which you have just now.			
• Press ▶ to stop playing beats.			
7.Volme			
• Using ▲ to control volume which you need, the initial setting is level 12, and the MAX volume is level 15.			
8.Vibrato			
• Press "Vibrato" to star this funtion, and press it again , function stoped.			
9.Sustain			
• Press "Sustain" to start this function, and press it again, function stoped.			
10.Drum kit			
• Press "Drum Kit", all the sounds will change into percussion sound, and stop it when you press it again.			
11.Single/fingered chord			
• Press "Synch" button, LED display "ON" to enter single/fingered mode, then press ▶ button, LED display "000", press "Single" button to start single chord, LED display "C01", or press "Fingered" button to start fingered chord, LED display "C02", user can play 14 white keys and 10 black keys on the bass. (61 keys can choose 5 white keys and 3 black keys in the bass) Press ▶ button to stop.			
• User can choose different rhythm with single/fingered.			
12.Tempo			
• Press ▲ and ▼ to turn up and slow down the tempo.			
13.Metronome			
• Metronome function control, press twice, function stop.			
14.Sleep function			
• It will enter into auto stand-by and sleep mode if there is no action after 1minute, press any key can wake up it.			
15.LED Indicator			
• Red LED light is power indicator. Press ⏻ button to light on the power indicator and display screen,LED indicator also light on under sleep mode.Repress ⏻ button, red indicator and display screen light off.			
• Green LED light is charging indicator, connect USB 5V adapter to power the built-in li-ion battery when the battery is lack of power. When green indicator light off it means the battery is fully charged.			
16.Power ON/OFF button			
• First press 1s of this button ⏻ to open. Second press of this button ⏻ to close.			
Attention: please insert the USB cable to supply the power in the first time, meanwhile it can be used normally and charging for the battery inside.			

IV Accessory one:lists of tone			
Tone Number	Name	Tone Number	Name
T00	Piano 1	T35	Freeless Bass
T01	Piano 2	T36	Slap Bass 1
T02	Piano 3	T37	Slap Bass 2
T03	Honky-Tonk Piano	T38	Synth Bass 1
T04	Rhodes Piano	T39	Synth Bass 2
T05	Chorused Piano	T40	Violin
T06	Harpischord	T41	Viola
T07	Clavinet	T42	Cello
T08	Celesta	T43	Contrabass
T09	Glockenspiel	T44	Tremolo Strings
T10	Music Box	T45	Pizzicato Strings
T11	Vibraphone	T46	Orchestral Harp
T12	Marmba	T47	Timpani
T13	Xylophone	T48	String Ensemble 1
T14	Tubular Bells	T49	String Ensemble 2
T15	Santur	T50	SynthStrings 1
T16	Hammond Organ	T51	SynthStrings 2
T17	Percussive Organ	T52	Choir/Acous
T18	Rock Organ	T53	Voice Ocho
T19	Church Organ	T54	Synth Voice
T20	Reed Organ	T55	Orchestra Hit
T21	Accordion	T56	Trumpet
T22	Harmonica	T57	Trombone
T23	Bandswicon	T58	Tuba
T24	Acoustic Guitar (nylon)	T59	Muted Trumpet
T25	Acoustic Guitar (steel)	T60	French Horn
T26	Electric Guitar (jazz)	T61	Brass Section
T27	Electric Guitar (clean)	T62	Synth Brass 1
T28	Electric Guitar (muted)	T63	Synth Brass 2
T29	Overdriven Guitar	T64	Soprano Sax
T30	Distortion Guitar	T65	Alto Sax
T31	Guitar Harmonics	T66	Tenor Sax
T32	Acoustic Bass	T67	Baritone Sax
T33	Electric Bass(Finger)	T68	Oboe
T34	Electric Bass(pick)	T69	English Horn

Tone Number	Name	Tone Number	Name
T70	Bassoon	T99	FX 4 (atmosphere)
T71	Clarnet	T100	FX 5 (brightness)
T72	Piccolo	T101	FX 6 (goblins)
T73	Flute	T102	FX 7 (echoes)
T74	Recorder	T103	FX 8 (sci-fi)
T75	Pan Flute	T104	Sitar
T76	Bottle Blow	T105	Banjo
T77	Shakuhachi	T106	Shamisen
T78	Whistle	T107	Koto
T79	Ocarina	T108	Alimba
T80	Lead 1 (square)	T109	Bagpipe
T81	Lead 2 (sawtooth)	T110	Fiddle
T82	Lead 3 (celloose lead)	T111	Shamal
T83	Lead 4 (chiff lead)	T112	Tinkle Bell
T84	Lead 5 (charang)	T113	Agogo
T85	Lead 6 (voice)	T114	Steel Drums
T86	Lead 7 (ffths)	T115	Jazzballed
T87	Lead 8 (bass-lead)	T116	Tanko Drum
T88	Pad 1 (one aqd)	T117	Melodic Tom
T89	Pad 2 (warm)	T118	Synth Drum
T90	Pad 3 (polysynth)	T119	Reverse Cymbal
T91	Pad 4 (choir)	T120	Guitar Fret Noise
T92	Pad 5 (bowed)	T121	Breath Noise
T93	Pad 6 (metallic)	T122	Seashore
T94	Pad 7 (halo)	T123	Bird Tweet
T95	Pad 8 (sweep)	T124	Telephone Ring
T96	FX 1 (rain)	T125	Helicopter
T97	FX 2 (soundtrack)	T126	Applause
T98	FX 3 (crystal)	T127	Gun shot

V Accessory two:lists of rhythm			
Rhythn Number	Name	Rhythn Number	Name
R000	Begunswing	R035	Country1&T
R001	Beguna1	R036	Tango1
R002	Beguna2	R037	Tango2
R003	Pqphit	R038	Polka 1
R004	Pop	R039	Polka 2
R005	Popmalay	R040	Poppswing
R006	BossaNova	R041	Easyswing
R007	Disco 1	R042	Softswing
R008	Disco 2	R043	Rock 1
R009	Bluegrassdisco	R044	Rock 2
R010	Waltz 1	R045	Rock 3
R011	Waltz 2	R046	Airyrock
R012	Tramballadwaltz	R047	Heartrock
R013	Bossawaltz	R048	Rock&roll
R014	Fastwaltz	R049	Urban
R015	Shuffewaltz	R050	Ballad
R016	Reggawaltz	R051	Jazzballed
R017	Rhumbawaltz	R052	C. Ballad
R018	March 1	R053	4J. Ballad
R019	March 2	R054	60Slowballad
R020	Rhumba1	R055	PianoBallad
R021	Rhumba2	R056	50Ballad
R022	Slow1	R057	Snakebase
R023	Slow2	R058	Happyluise
R024	Discocha	R059	Oldluise
R025	Guaracha	R060	Bluegrass
R026	Charl	R061	Boodie1
R027	Samba1	R062	Boodie2
R028	Samba2	R063	Boodie3
R029	Umbonmai	R064	Shuffle 1
R030	88H1	R065	Shuffle 2
R031	88H2	R066	Dreamshuffle
R032	16BH1	R067	Countryshuffle
R033	16BH2	R068	Quickshuffle
R034	Ballad1&T	R069	Reggashuffle

Rhythm Number	Name	Rhythm Number	Name
R070	R&B	R099	Thevillage
R071	Reggae&Pulse	R100	Countryshuffle
R072	Reggae1	R101	Electricduys
R073	Reggae2	R102	Darkkeys
R074	Salsa1	R103	Easywalk
R075	Salsa2	R104	Destiny
R076	Salsa3	R105	Comedy
R077	Tecno 1	R106	Dive
R078	Tecno 2	R107	Liquidnova
R079	Funky 1	R108	Kindustrialfolk
R080	Funky 2	R109	Slowpure
R081	Dixie 1	R110	SimpleJam
R082	Diva 2	R111	Synthetix
R083	Foxtrot 1	R112	Fed
R084	Foxtrot 2	R113	Accelerate
R085	R.rol 1	R114	Beachnight
R086	R.rol 2	R115	Irish
R087	Fastbeat	R116	Tarantella
R088	Quickbeat	R117	Bighand
R089	Smootherbeat	R118	Dandul
R090	Squarebeat	R119	Fusion
R091	Eurobeat	R120	House
R092	Alphadance	R121	Keron
R093	Betadance	R122	Latin
R094	Dreamdance	R123	Mambo
R095	Dance1	R124	Newage
R096	Dance2	R125	Slowrc
R097	Dance3	R126	Soul
R098	Rap	R127	Twist

VI Accessory three:name lists of demo			
Demo Number	Name	Demo Number	
D00	Lily mid	D07	
D01	Winter Sonata	D08	
D02	Kyomi Gulle Song	D09	
D03	Beautiful Jazz	D10	
D04	Forest Mist-Neptun	D11	
D05	Destiny	D12	
D06	Poety of the Bird	D13	

- VII Maintenance of hand-roll piano**
1. The hand-roll piano can be clean with soft and clean towel.
 2. It should be rolled well after use.
 3. Do not put the piano in hot and humid place.
- VIII Instruction for the use of hand-roll piano**
- When using the piano, it should be put in flat place, and do not move it to other place, function may be effected and damaged.
 - The piano cannot be rolled too tight when putting it away, in case the no damaged and the product life is shortened.
 - Do not pull or twist the keyboard of the piano.
 - Cannot split any part of the piano.
 - Cannot put the piano in the place with strong wave, in case some function will be damaged.
- IX Trouble shooting**
- If the sound is abnormal or the piano key is invalid, please press **⏻** to turn off the power, restore the original setting.