Light up the Life with Music

Folding Electronic Piano
User Manual

Zusammenklappbares elektronisches Klavier–Bedienungsanleitung

折りたたみ式電子ピアノ
取扱説明書

Software download address
Software-Download-Adresse
ソフトウェアダウンロードアドレス
http://kohoxo.com/en-piano.zip

Dear Customer,

Thank you for choosing our product! We are deeply honored by your trust and support. For over 15 years, our brand has been dedicated to designing and refining portable electronic musical instruments, including electronic pianos, electronic drums, electronic keyboards, and more. Our mission is to deliver innovative, high-quality tools that inspire creativity and musical exploration.

To ensure the best use of your instrument, we strongly recommend that you carefully read and follow the instructions and precautions outlined in this manual. This will help you to fully utilize the potential of your equipment while safeguarding your experience.

We sincerely hope this product brings you joy, convenience, and endless musical possibilities. Should you have any questions, concerns, or feedback, please do not hesitate to contact our customer service team. We are committed to providing prompt and professional support to enhance your journey with us.

Thank you once again for being part of our story. Let the music begin!

I. Product function introduction:

- Folded electronic piano
- 61/88 standard keys (includes black keys)
- Tone:128 tones
- Rhythm:128 rhythms
- Demo:20 demos
- RHY function
- Demo function
- Metronome function
- Knob button function
- Sleeping function
- Chord function
- Dual keyboard function
- Dynamic function
- LCD Display
- Sustain pedal
- Blue-tooth MIDI/Blue-tooth audio function
- Power supply:1. Built-in battery 3.7V/1800mAh
  2.USB 5V/1A supply

II. Function button description:

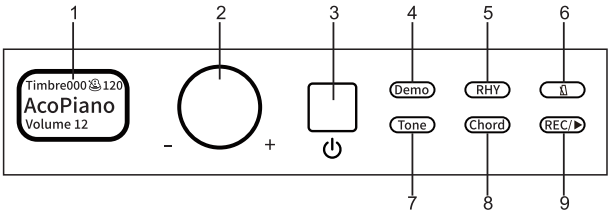

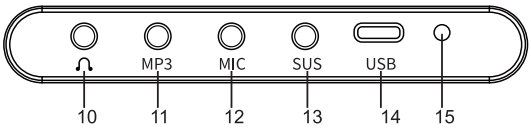

1		LCD display screen	9	REC/▶	Record/Play button
2		Knob button	10		Earphone interface
3		ON/OFF	11		Audio input
4	Demo	Demo button	12		MIC input
5	RHY	Rhythm button	13		Sustain pedal interface
6		Metronome button	14		Type-C interface
7	Tone	Tone button	15		Charging indicator
8	Chord	Chord button			

III. Product function description:

1.ON/OFF button

Press this button about 0.5 seconds will turn on, repress will turn off.

2. Knob button (Volume adjust)

1. The power-on defaults is the volume adjustment mode, rotate left and right to select the volume level.
2. The volume can be selected from 0-16 level, the default is 12 level.
3. Press "Knob"button to enter the menu, rotate "Knob"button left and right to enter the selection function, firstly press to enter the menu setting, repress to enter the function confirmation.Return to volume mode without any operation for 3 seconds.
4. Under any mode, press"Knob"button for 2 seconds, the system restores to the default state.

3. Demo button

Press “Demo"button to play demo songs, repress "Demo” button to stop, rotate “Knob"button left and right to select the different demo.No any operation for 3 seconds will return to volume mode.

4.RHY button

Press “RHY"button to play rhythm, repress"RHY"button to stop, rotate “Knob”button left and right to select the different rhythm.No any operation for 3 seconds will return to volume mode.

5. button

Press" "button to play, repress " " button to stop, rotate "Knob"button left and right to select the different beat.No any operation for 3 seconds will return to volume mode.

6. Tone button

Press "Tone"button, rotate "Knob"button left and right to select the different tone.No any operation for 3 seconds will return to volume mode.

7. Chord button

While playing the rhythm, press the "Chord" button to enter single-fingered and multi-fingered chord modes;

Chord function: Low range,61 keys (19 keys in the C-f# interval). 88 keys (34 keys in the A2-f#interval) play the rhythm play chords that match the rhythm, and the pitch of the chord changes with the pitch of the keys;

Press the "Chord" button to turn on and off the chord function, and return to the volume interface mode without any operation for 3 seconds.

8.REC/ ▶ button(Firstly press for recording, repress for playing)

Press and hold the" REC/ "button for 1 second to enter recording mode;finish recording, short press" REC/" to playback; short press it again to stop playback.

9. Tempo

1. Press "Knob” button, rotate "Knob"button left and right to select the different tempo.
2. Press "Knob” button, rotate "Knob"button left and right, the tempo can be

selected from -240 to +240,the default is 120,means the tempo is quick or slow. No any operation for 3 seconds will return to volume mode.

10. Trans

1. Press "Knob" button, rotate "Knob"button left and right to select the transposition.
2. Press "Knob"button, rotate "Knob"button left and right, the transposition can be selected from -6 to +6,the default is 0. No any operation for 3 seconds will return to volume mode.

11. Dual Keyboard

1. Press "Knob"button, rotate "Knob"button left and right to select dual keyboard.
2. Press "Knob'button, rotate "Knob"button left and right to select dual keyboard open or close. No any operation for 3 seconds will return to volume mode



Before split:A0-B3
After split:A1-B4

Before split:C4-C8
After split:C2-C6

12. Teaching

1. Press "Knob"button, rotate "Knob"button to select teaching.
2. Press "Knob"button, rotate "Knob"button to select teaching mode(A-Mode, B-Mode, teaching off), No any operation for 3 seconds will return to volume mode.

A-Mold:Select the different demo, press "Demo"button to enter A-Mode. Play any key to play the main melody of the demo song.

B-Mold:Select the different demo, press "Demo"button to enter B-Mode. The user presses the right key to make a sound, press the wrong key to make no sound

13. Sustain

1. Press "Knob"button, rotate "Knob"button to select sustain.
2. Press "Knob"button, rotate "Knob' button left and right to select sustain open or close, turn on the sustain function to make the sound with sustain effect during performance. No any operation for 3 seconds will return to volume mode

14. Vibrato

1. Press "Knob"button, rotate "Knob"button to select vibrato.
2. Press "Knob"button, rotate "Knob'button to select vibrato open or close. Turn on the vibrato function to make the sound produce a vibrato effect during performance. No any operation for 3 seconds will return to volume mode

15. Keyboard Drum

1. Press “Knob"button, rotate “Knob"button to select the keyboard drum.
2. Press “Knob"button, rotate “Knob"button to select keyboard drum open or close. When the keyboard drum is turned on, all keys are turned on to become the percussion sound. When the keyboard drum is turned off, the percussion sound is turned off. No any operation for 3 seconds will return to volume mode.

16. Dynamic

1. Press "Knob”" button, rotate "Knob” button to select dynamic.
2. Press “Knob"button, rotate “Knob"button to select dynamic open or close. When the dynamic switch is selected to be on, the keys are pressed harder, and the sound played out is louder.
   The default is on. No any operation for 3 seconds will return to volume mode.

17. Sleep-mode

1. Press "Knob"button, rotate “Knob” to select the sleep-mode.
2. Press "Knob"button, rotate "Knob” left and right to select sleep-mode open or close.
3. After the sleep mode is turned on, there is no action for ten minutes, and it enters the shutdown state. At this time, you need to press the power button to restart.
4. The sleep mode is on by default.
5. No any operation for 3 seconds will return to volume mode.

18.LED indicator

The red indicator light is the charging indicator. When the built-in lithium battery is not fully charged, plug in the USB 5V power supply to charge. The red LED indicator light is green when the battery is fully charged.

19. Blue-tooth MIDI function

Through Bluetooth, you can wirelessly connect to piano learning apps on Apple mobile phones or iPads, such as GarageBand, Singing Bar and Perfect Piano and other professional apps.Specific connection (take GarageBand as an example): Download GarageBand software on your iPhone or tablet, Open the software, select the "Settings" icon on the top right to enter the column, select "Advanced", select the Bluetooth MIDI device, select MIDI-Piano in the Bluetooth MIDI device, and click connect, and you can use it normally (if it fails to connect, please Restart the electric organ)

20. Blue-tooth audio function

After booting, the Bluetooth function is automatically turned on and there is a prompt tone.

Bluetooth is turned on and waiting for the connected mobile phone to play accompaniment or music. The mobile phone searches for Music-Piano to connect. After the connection is successful, there will be a prompt tone. Volume increase or decrease or music selection needs to be performed on the mobile phone.

21. Keyboard light (Only for light version)

1. The light is on when open, press "Knob"button, rotate the "Knob"button to select the key light;
2. After pressing the "Knob"button, rotate "Knob"button left and right to choose the key light is on or off, turn on keylight function, which key is played, the corresponding key light will be on during the performance, and it supports APP MIDI light and computer MIDI Software lights.

Accessory one: lists of demo

NO	name	NO	name
000	Croatian Rhapsody	010	Bandari
001	By Alice	011	Castle in the Sky
002	A comme amour	012	Song of Joy
003	Green Sleeves	013	Edelweiss
004	Dream Wedding	014	Dance of fireflie
005	Romance De Amor	015	My soul
006	Dancing Girl	016	CSIKOS POST
007	CrystlLake	017	Rhythm Of The Rain
008	Les premiers sourires de Vanessa	018	The Maiden's Prayer
009	Snowdreams	019	The Blue Danube

Accessory two: lists of tone

NO	name	NO	name
	Piano	022	Harmonica
000	Piano 1	023	Bandoneon
001	Piano 2		Guitar
002	Piano 3	024	Acoustic Guitar (nylon)
003	Honky-Tonk Piano	025	Acoustic Guitar(steel)
004	Rhodes Piano	026	Electric Guitar (jazz)
005	Chorused Piano	027	Electric Guitar (clean)
006	Harpsichord	028	Electric Guitar (muted)
007	Clavinet	029	Overdriven Guitar
	Percussion	030	Distortion Guitar
008	Celesta	031	Guitar Harmonics
009	Glockenspiel		Bass
010	Music Box	032	Acoustic Bass
011	Vibraphone	033	Electric Bass(finger)
012	Marimba	034	Electric Bass(pick)
013	Xylophone	035	Fretless Bass
014	Tubular Bells	036	Slap Bass 1
015	Santur	037	Slap Bass 2
	Organ	038	Synth Bass 1
016	Hammond Organ	039	Synth Bass 2
017	Percussive Organ		String Solo
018	Rock Organ	040	Violin
019	Church Organ	041	Viola
020	Reed Organ	042	Cello
021	Accordion	043	Contrabass

NO	name	NO	name
044	Tremolo Strings	078	Whistle
045	Pizzicato Strings	079	Ocarina
046	Orchestral Harp		Synthetic tonic
047	Timpani	080	Lead 1 (square)
	Chorus	081	Lead 2 (sawtooth)
048	String Ensemble 1	082	Lead 3 (calliope lead)
049	String Ensemble 2	083	Lead 4 (chiff lead)
050	SynthStrings 1	084	Lead 5 (charang)
051	SynthStrings 2	085	Lead 6 (voice)
052	Choir Aahs	086	Lead 7 (fifths)
053	Voice Oohs	087	Lead 8 (bass+lead)
054	Synth Voice		Synthetic soft tone
055	Orchestra Hit	088	Pad 1 (new age)
	Brass instrument	089	Pad 2 (warm)
056	Trumpet	090	Pad 3 (polysynth)
057	Trombone	091	Pad 4 (choir)
058	Tuba	092	Pad 5 (bowed)
059	Muted Trumpet	093	Pad 6 (metallic)
060	French Horn	094	Pad 7 (halo)
061	Brass Section	095	Pad 8 (sweep)
062	Synth Brass 1		Synthetic effects
063	Synth Brass 2	096	FX 1 (rain)
	Reed instrument	097	FX 2 (soundtrack)
064	Soprano Sax	098	FX 3 (crystal)
065	Alto Sax	099	FX 4 (atmosphere)
066	Tenor Sax	100	FX 5 (brightness)
067	Baritone Sax	101	FX 6 (goblins)
068	Oboe	102	FX 7 (echoes)
069	English Horn	103	FX 8 (sci-fi)
070	Bassoon		Tribal instrument
071	Clarinet	104	Sitar
	Wind instrument	105	Banjo
072	Piccolo	106	Shamisen
073	Flute	107	Koto
074	Recorder	108	alimba
075	Pan Flute	109	Bagpipe
076	Bottle Blow	110	Fiddle
077	Skakuhachi	111	Shanai

NO	name	NO	name
	Percussion		Sound effects
112	Tinkle Bell	120	Guitar Fret Noise
113	Agogo	121	Breath Noise
114	Steel Drums	122	Seashore
115	Woodblock	123	Bird Tweet
116	Taiko Drum	124	Telephone Ring
117	Melodic Tom	125	Helicopter
118	Synth Drum	126	Applause
119	Reverse Cymbal	127	Gun shot

Accessory three: lists of rhythm

NO	name	NO	name
000	Beguines Wing	026	Char
001	Beguine_2	027	Samba_1
002	Beguine_3	028	Samba_2
003	Pop hit	029	Ubminimal
004	Pop	030	8Bit_1
005	Pop Malay	031	8Bit_2
006	Bossa nova	032	16Bit_1
007	Disco _1	033	16bit_2
008	Disco_2	034	Ballad_16T
009	Blue grass disco	035	Country_16T
010	Waltzl_1	036	Tango_1
011	Waltzl_2	037	Tango _2
012	True ballad waltz	038	Polka_1
013	Bossa Waltz	039	Polka _2
014	Easy Waltz	040	Pop Swing
015	Shuffle Waltz	041	Easy Swing
016	Reggae Waltz	042	Soft Swing
017	Rumba Waltz	043	Rock_1
018	March_1	044	Rock_2
019	March_2	045	Rock_3
020	Rumba _1	046	Airy Rock
021	Rumba_2	047	Heart Rock
022	Slow_1	048	Rock & Roll
023	Slow_2	049	Urban Rock
024	Disco cha cha	050	Ballad
025	Guala cha	051	Jazz Ballad

NO	name	NO	name
052	C.Ballad	090	Square Beat
053	J.Ballad	091	Euro Beat
054	60s Slow Ballad	092	Alpha Dance
055	Piano Ballad	093	Beta Dance
056	50s Ballad	094	Dream Dance
057	Snake Base	095	Dance_1
058	Happy Blues	096	Dance_2
059	Old Blues	097	Dance_3
060	Blue Gras	098	RAP
061	Boodie_1	099	The Country
062	Boodie_2	100	Country Shuffle
063	Boodie_3	101	Electric Keys
064	Shuffle_1	102	Dark Keys
065	Shuffle_2	103	Easy Walk
066	Dream Shuffle	104	Destiny
067	Country Shuffle	105	Comedy
068	Quick Shuffle	106	Drive
069	Reggae Shuffle	107	Liquid Nova
070	R&B	108	Indonesian folk
071	Reggae_1	109	Absolute Music
072	Reggae_2	110	Jamaica
073	Reggae_3	111	Synthesis
074	Salsa _1	112	Feel
075	Salsa_2	113	Accelerate
076	Salsa_3	114	Beach Night
077	Tecno_1	115	Irish
078	Tecno_2	116	Tarantella
079	Funky_1	117	Big band
080	Funky_2	118	Dan
081	Dixie_1	119	Fusion
082	Dixie_2	120	Horse
083	Foxtrot_1	121	Canon
084	Foxtrot_2	122	Latin
085	R.roll_1	123	Mambo
086	R.roll_2	124	New age
087	Fast Beat	125	Slow rc
088	Quick Beat	126	Soul
089	Smooth Beat	127	Twist

IV. Protection of electric piano:

1. The electric piano can be cleaned with a clean soft towel.
2. Store the electric piano after use. Do not store the electric piano in a hot and humid place.

V. Precautions for using electronic piano

. Do not split any part of the electric piano.
. Do not place the electric piano in a hot or humid place.
. Do not put it in a place with strong electric waves, so as not to affect the function.

VI. Simple troubleshooting:

If the sound is abnormal or the keys fail, please turn off the power and restart the machine to restore the original settings.

VII. Product specifications

1. Product size (unfolded): 1260*210*62mm, weight: 4.05kg
   Product size (folded): 630*210*124mm, weight: 4.05kg
2. Input voltage: DC 12V/3A
3. Material: ABS

Thank you for choosing OYAYO!
Dear Customer:
Thanks for your trust and purchase of our musical instruments! Your support is the driving force for our continuous pursuit of excellent quality. We will always provide you with a high-quality music experience with a professional attitude.

After-sales Service Commitment
This product enjoys a 1-year warranty service for the whole machine (calculated from the date of receipt)
During the warranty period, if there are product quality problems caused by non-human factors, we will provide free repair or replacement services
Please keep the purchase receipt as the basis for warranty

Contact us
If you encounter any problems during use or have suggestions for improvement, please feel free to contact us through the following methods:
Official after-sales email: ***support@oyayomusic.com***
Service response: reply within 48 hours on working days

Music is moving because of you, looking forward to creating more wonderful moments with you!

OYAYO
Light up the Life with Music

Sehr geehrte Kundin, sehr geehrter Kunde,
Vielen Dank, dass Sie sich für unser Produkt entschieden haben! Wir freuen uns sehr über Ihr Vertrauen und Ihre Unterstützung. Seit über 15 Jahren entwickelt und verfeinert unsere Marke tragbare elektronische Musikinstrumente, darunter E-Pianos, E-Drums, E-Keyboards und mehr. Unsere Mission ist es, innovative, hochwertige Instrumente zu entwickeln, die Kreativität und musikalische Entdeckungen inspirieren.
Um Ihr Instrument optimal nutzen zu können, empfehlen wir Ihnen dringend, die Anweisungen und Vorsichtsmaßnahmen in dieser Anleitung sorgfältig zu lesen und zu befolgen. So können Sie das Potenzial Ihres Instruments voll ausschöpfen und gleichzeitig Ihr Erlebnis schützen.
Wir hoffen aufrichtig, dass Ihnen dieses Produkt Freude, Komfort und endlose musikalische Möglichkeiten bietet. Bei Fragen, Anliegen oder Feedback wenden Sie sich bitte an unseren Kundenservice. Wir sind bestrebt, Ihnen schnell und professionell zu helfen, um Ihre Erfahrung mit uns zu verbessern.
Nochmals vielen Dank, dass Sie Teil unserer Geschichte sind. Lasst die Musik beginnen!

I. Einführung in die Produktfunktion:

· Gefaltetes E-Piano
· 61/88 Standardtasten (inkl. schwarzer Tasten)
· Klangfarbe: 128 Töne
· Rhythmus: 128 Rhythmen
· Demo: 20 Demos
· RHY-Funktion
· Demo-Funktion
· Metronom-Funktion
· Drehknopf-Funktion
· Standby-Funktion
· Akkord-Funktion
· Doppeltastatur-Funktion
· Dynamik-Funktion
· LCD-Display
· Haltepedal
· Bluetooth-MIDI/Bluetooth-Audio-Funktion
· Stromversorgung:
  1. Eingebauter Akku 3,7V/1800 mAh
  2. USB-Anschluss 5V/1A

II. Function button description:

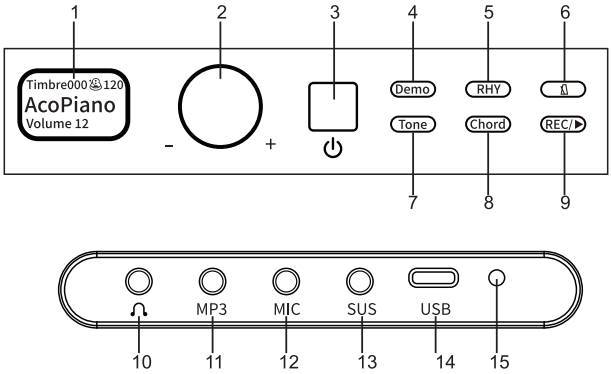

1		LCD-Display	9	REC/▶	Aufnahme-/Wiedergabe-Taste
2		Drehregler	10		Kopfhöreranschluss
3		Ein/Aus	11		Audioeingang
4	Demo	Demo-Taste	12		Mikrofoneingang
5	RHY	Rhythmus-Taste	13		Anschluss für Haltepedal
6		Metronom-Taste	14		Typ-C-Anschluss
7	Tone	Klangfarben-Taste	15		Ladeanzeige
8	Chord	Akkord-Taste			

III. Produktfunktionsbeschreibung:

1. EIN/AUS-Taste

Drücken Sie diese Taste etwa 0,5 Sekunden lang, um das Gerät einzuschalten. Drücken Sie sie erneut, um das Gerät auszuschalten.

2. Drehknopf (Lautstärkeregelung)

1. Die Standardeinstellung beim Einschalten ist die Lautstärkeregelung. Drehen Sie den Knopf nach links und rechts, um die Lautstärke einzustellen.
2. Die Lautstärke kann zwischen 0 und 16 Stufen eingestellt werden, die Standardeinstellung ist 12.
3. Drücken Sie den Drehknopf, um das Menü zu öffnen. Drehen Sie den Drehknopf nach links und rechts, um die Auswahlfunktion aufzurufen. Drücken Sie zuerst, um die Menüeinstellungen zu öffnen, und drücken Sie erneut, um die Funktion zu bestätigen.Kehren Sie 3 Sekunden lang in den Lautstärkemodus zurück, ohne eine weitere Bedienung vorzunehmen.
4. Drücken Sie in einem beliebigen Modus den Drehknopf 2 Sekunden lang, um das System in den Standardzustand zurückzusetzen.

3. Demo-Taste

Drücken Sie die Demo-Taste, um Demosongs abzuspielen. Drücken Sie die Demo-Taste erneut, um die Wiedergabe zu stoppen. Drehen Sie den Drehknopf nach links und rechts, um ein anderes Demo auszuwählen. 3 Sekunden lang keine Bedienung, um in den Lautstärkemodus zurückzukehren.

4. RHY-Taste

Drücken Sie die RHY-Taste, um einen Rhythmus abzuspielen. Drücken Sie die RHY-Taste erneut, um die Wiedergabe zu stoppen. Drehen Sie den Drehknopf nach links und rechts, um einen anderen Rhythmus auszuwählen. 3 Sekunden lang keine Bedienung, um in den Lautstärkemodus zurückzukehren.

5. Taste

Drücken Sie die Taste " " zum Abspielen, drücken Sie die Taste " " zum Stoppen. Drehen Sie den Knopf nach links und rechts, um einen anderen Takt auszuwählen. Nach 3 Sekunden ohne Bedienung kehrt man in den Lautstärke-modus zurück.

6. Tontaste

Drücken Sie die Taste "Tone" und drehen Sie den Knopf nach links und rechts, um einen anderen Ton auszuwählen. Nach 3 Sekunden ohne Bedienung kehrt man in den Lautstärkemodus zurück.

7. Akkordtaste

Drücken Sie während der Rhythmuswiedergabe die „Chord"-Taste, um zwischen den Ein- und Mehrfinger-Akkordmodi zu wechseln.

Akkordfunktion: 61 Tasten im unteren Bereich (19 im Intervall C-fis). 88 Tasten (34 im Intervall A2-fis) spielen die zum Rhythmus passenden Akkorde. Die Tonhöhe des Akkords ändert sich mit der Tonhöhe der Tasten.

Drücken Sie die „Chord"-Taste, um die Akkordfunktion ein- und auszuschalten und kehren Sie 3 Sekunden lang ohne Bedienung in den Lautstärkemodus zurück.

8. REC/ ▶ -Taste (Zuerst drücken für die Aufnahme. Zum Abspielen erneut drücken)

Halten Sie die Taste „REC/ ▶" 1 Sekunde lang gedrückt, um in den Aufnahmemodus zu wechseln. Beenden Sie die Aufnahme, drücken Sie kurz „REC/ ▶", um die Wiedergabe zu starten. Drücken Sie die Taste erneut kurz, um die Wiedergabe zu stoppen.

9. Tempo

1. Drücken Sie den Knopf und drehen Sie ihn nach links und rechts, um das gewünschte Tempo auszuwählen.
2. Drücken Sie den Knopf und drehen Sie ihn nach links und rechts. Das Tempo kann zwischen -240 und +240 eingestellt werden. Die Standardeinstellung ist 120, was bedeutet, dass das Tempo schnell oder langsam ist. Nach 3 Sekunden ohne Bedienung kehrt man in den Lautstärkemodus zurück.

10. Transposition

1. Drücken Sie den Knopf und drehen Sie ihn nach links und rechts, um die Transposition auszuwählen.
2. Drücken Sie den Knopf und drehen Sie ihn nach links und rechts. Die Transposition kann zwischen -6 und +6 eingestellt werden. Die Standardeinstellung ist 0. Nach 3 Sekunden ohne Bedienung kehrt der Lautstärkemodus zurück.

11. Dual-Tastatur

1. Drücken Sie den Knopf und drehen Sie ihn nach links und rechts, um die Dual-Tastatur auszuwählen.

2. Drücken Sie den Knopf und drehen Sie ihn nach links und rechts, um die Dual-Tastatur zu öffnen oder zu schließen. Nach 3 Sekunden ohne Bedienung kehrt der Lautstärkemodus zurück.

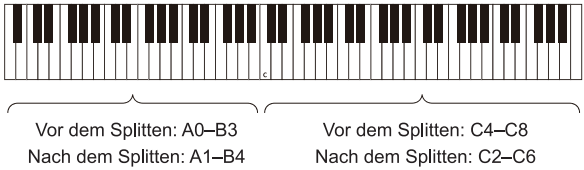

12. Lernen

1. Drücken Sie den Knopf und drehen Sie ihn, um „teaching“ auszuwählen.
2. Drücken Sie den Knopf und drehen Sie ihn, um den teaching Modus (A-Modus, B-Modus, Lernen aus) auszuwählen. Nach 3 Sekunden ohne Bedienung kehrt der Lautstärkemodus zurück.

A-Modus: Wählen Sie eine andere Demo und drücken Sie die Demo-Taste, um in den A-Modus zu gelangen. Spielen Sie eine beliebige Taste, um die Hauptmelodie des Demosongs abzuspielen.

B-Modus: Wählen Sie eine andere Demo und drücken Sie die Demo-Taste, um in den B-Modus zu gelangen. Drücken Sie die rechte Taste, um einen Ton zu erzeugen, drücken Sie die falsche Taste, um keinen Ton zu erzeugen.

13. Sustain

1. Drücken Sie den Knopf und drehen Sie ihn, um Sustain auszuwählen.
2. Drücken Sie den Knopf und drehen Sie ihn nach links oder rechts, um die Sustain-Funktion zu aktivieren. Aktivieren Sie die Sustain-Funktion, um den Klang während des Spiels mit Sustain-Effekt zu erzeugen. 3 Sekunden lang keine Bedienung, um in den Lautstärkemodus zurückzukehren.

14. Vibrato

1. Drücken Sie den Knopf und drehen Sie ihn, um Vibrato auszuwählen.
2. Drücken Sie den Knopf und drehen Sie ihn, um Vibrato auszuwählen. Aktivieren Sie die Vibrato-Funktion, um den Klang während des Spiels mit Vibrato-Effekt zu erzeugen. 3 Sekunden lang keine Bedienung, um in den Lautstärkemodus zurückzukehren.

15. Keyboard-Drum

1. Drücken Sie den Knopf und drehen Sie ihn, um die Keyboard-Drum auszuwählen.
2. Drücken Sie den Knopf und drehen Sie ihn, um die Keyboard-Drum zu öffnen oder zu schließen. Bei eingeschalteter Keyboard-Drum erklingen alle Tasten als Percussion-Sound. Bei ausgeschalteter Keyboard-Drum erklingt auch der Percussion-Sound. Nach 3 Sekunden ohne Bedienung kehrt der Lautstärkemodus zurück.

16. Dynamisch

1. Drücken Sie den Knopf und drehen Sie ihn, um den Modus „dynamic“ auszuwählen.
2. Drücken Sie den Knopf und drehen Sie ihn, um „Dynamisch“ zu aktivieren oder zu deaktivieren. Wenn der Dynamikschalter aktiviert ist, werden die Tasten stärker gedrückt, und der Ton wird lauter.Die Standardeinstellung ist „Ein“. Nach 3 Sekunden ohne Bedienung kehrt das Gerät in den Lautstärkemodus zurück.

17. Ruhemodus

1. Drücken Sie den Knopf und drehen Sie ihn, um den "sleep" Mode auszuwählen.
2. Drücken Sie den Knopf und drehen Sie ihn nach links und rechts, um den Ruhemodus zu aktivieren oder zu deaktivieren.
3. Nach dem Aktivieren des Ruhemodus wird das Gerät zehn Minuten lang nicht bedient und schaltet sich dann ab. Drücken Sie anschließend die Ein-/Aus-Taste, um das Gerät neu zu starten.
4. Der Ruhemodus ist standardmäßig aktiviert.
5. Nach 3 Sekunden ohne Bedienung kehrt das Gerät in den Lautstärkemodus zurück.

18. LED-Anzeige

Die rote Anzeige leuchtet auf, wenn der eingebaute Lithium-Akku nicht vollständig geladen ist. Schließen Sie zum Laden das 5-V-USB-Netzteil an. Die rote LED leuchtet grün, wenn der Akku vollständig geladen ist.

19. Bluetooth-MIDI-Funktion

Über Bluetooth können Sie sich drahtlos mit Klavierlern-Apps auf Apple-Smartphones oder iPads verbinden, wie z. B. GarageBand, Singing Bar, Perfect Piano und anderen professionellen Apps.

Anschlussbeispiel (z. B. GarageBand): Laden Sie die GarageBand-Software auf Ihr iPhone oder Tablet herunter. Öffnen Sie die Software, wählen Sie oben rechts „Einstellungen", wählen Sie „Erweitert", wählen Sie das Bluetooth-MIDI-Gerät und anschließend MIDI-Piano aus. Klicken Sie auf „Verbinden". Die Orgel kann nun wie gewohnt verwendet werden. (Sollte die Verbindung fehlschlagen, starten Sie die Orgel bitte neu.)

20. Bluetooth-Audiofunktion

Nach dem Booten wird die Bluetooth-Funktion automatisch aktiviert, und es ertönt ein Signalton.

Bluetooth ist aktiviert und wartet auf die Wiedergabe von Begleitung oder Musik durch das verbundene Mobiltelefon. Das Mobiltelefon sucht nach Music-Piano, um eine Verbindung herzustellen. Nach erfolgreicher Verbindung ertönt ein Signalton. Lautstärke erhöhen, verringern oder Musik auswählen können Sie über das Mobiltelefon.

21. Tastaturbeleuchtung (Nur für die Light-Version)

1. Die Beleuchtung leuchtet im geöffneten Zustand. Drücken Sie den Knopf und drehen Sie ihn, um die Tastenbeleuchtung auszuwählen.
2. Drehen Sie nach dem Drücken des Knopfs den Knopf nach links und rechts, um die Tastenbeleuchtung ein- oder auszuschalten. Aktivieren Sie die Tastenbeleuchtung. Die gespielte Taste leuchtet während des Spiels. Die Beleuchtung wird über die App und die MIDI-Software des Computers gesteuert.

Zubehör 1: Demolisten

NO	name	NO	name
000	Croatian Rhapsody	010	Bandari
001	By Alice	011	Castle in the Sky
002	A comme amour	012	Song of Joy
003	Green Sleeves	013	Edelweiss
004	Dream Wedding	014	Dance of fireflie
005	Romance De Amor	015	My soul
006	Dancing Girl	016	CSIKOS POST
007	CrystlLake	017	Rhythm Of The Rain
008	Les premiers sourires de Vanessa	018	The Maiden's Prayer
009	Snowdreams	019	The Blue Danube

Zubehör 2: Tonlisten

NO	name	NO	name
	Piano	022	Harmonica
000	Piano 1	023	Bandoneon
001	Piano 2		Guitar
002	Piano 3	024	Acoustic Guitar (nylon)
003	Honky-Tonk Piano	025	Acoustic Guitar(steel)
004	Rhodes Piano	026	Electric Guitar (jazz)
005	Chorused Piano	027	Electric Guitar (clean)
006	Harpsichord	028	Electric Guitar (muted)
007	Clavinet	029	Overdriven Guitar
	Percussion	030	Distortion Guitar
008	Celesta	031	Guitar Harmonics
009	Glockenspiel		Bass
010	Music Box	032	Acoustic Bass
011	Vibraphone	033	Electric Bass(finger)
012	Marimba	034	Electric Bass(pick)
013	Xylophone	035	Fretless Bass
014	Tubular Bells	036	Slap Bass 1
015	Santur	037	Slap Bass 2
	Organ	038	Synth Bass 1
016	Hammond Organ	039	Synth Bass 2
017	Percussive Organ		String Solo
018	Rock Organ	040	Violin
019	Church Organ	041	Viola
020	Reed Organ	042	Cello
021	Accordion	043	Contrabass

NO	name	NO	name
044	Tremolo Strings	078	Whistle
045	Pizzicato Strings	079	Ocarina
046	Orchestral Harp		Synthetic tonic
047	Timpani	080	Lead 1 (square)
	Chorus	081	Lead 2 (sawtooth)
048	String Ensemble 1	082	Lead 3 (calliope lead)
049	String Ensemble 2	083	Lead 4 (chiff lead)
050	SynthStrings 1	084	Lead 5 (charang)
051	SynthStrings 2	085	Lead 6 (voice)
052	Choir Aahs	086	Lead 7 (fifths)
053	Voice Oohs	087	Lead 8 (bass+lead)
054	Synth Voice		Synthetic soft tone
055	Orchestra Hit	088	Pad 1 (new age)
	Brass instrument	089	Pad 2 (warm)
056	Trumpet	090	Pad 3 (polysynth)
057	Trombone	091	Pad 4 (choir)
058	Tuba	092	Pad 5 (bowed)
059	Muted Trumpet	093	Pad 6 (metallic)
060	French Horn	094	Pad 7 (halo)
061	Brass Section	095	Pad 8 (sweep)
062	Synth Brass 1		Synthetic effects
063	Synth Brass 2	096	FX 1 (rain)
	Reed instrument	097	FX 2 (soundtrack)
064	Soprano Sax	098	FX 3 (crystal)
065	Alto Sax	099	FX 4 (atmosphere)
066	Tenor Sax	100	FX 5 (brightness)
067	Baritone Sax	101	FX 6 (goblins)
068	Oboe	102	FX 7 (echoes)
069	English Horn	103	FX 8 (sci-fi)
070	Bassoon		Tribal instrument
071	Clarinet	104	Sitar
	Wind instrument	105	Banjo
072	Piccolo	106	Shamisen
073	Flute	107	Koto
074	Recorder	108	alimba
075	Pan Flute	109	Bagpipe
076	Bottle Blow	110	Fiddle
077	Skakuhachi	111	Shanai

NO	name	NO	name
	Percussion		Sound effects
112	Tinkle Bell	120	Guitar Fret Noise
113	Agogo	121	Breath Noise
114	Steel Drums	122	Seashore
115	Woodblock	123	Bird Tweet
116	Taiko Drum	124	Telephone Ring
117	Melodic Tom	125	Helicopter
118	Synth Drum	126	Applause
119	Reverse Cymbal	127	Gun shot

Zubehör 3: Rhythmuslisten

NO	name	NO	name
000	Beguines Wing	026	Char
001	Beguine_2	027	Samba_1
002	Beguine_3	028	Samba_2
003	Pop hit	029	Ubminimal
004	Pop	030	8Bit_1
005	Pop Malay	031	8Bit_2
006	Bossa nova	032	16Bit_1
007	Disco _1	033	16bit_2
008	Disco_2	034	Ballad_16T
009	Blue grass disco	035	Country_16T
010	Waltzl_1	036	Tango_1
011	Waltzl_2	037	Tango _2
012	True ballad waltz	038	Polka_1
013	Bossa Waltz	039	Polka _2
014	Easy Waltz	040	Pop Swing
015	Shuffle Waltz	041	Easy Swing
016	Reggae Waltz	042	Soft Swing
017	Rumba Waltz	043	Rock_1
018	March_1	044	Rock_2
019	March_2	045	Rock_3
020	Rumba _1	046	Airy Rock
021	Rumba_2	047	Heart Rock
022	Slow_1	048	Rock & Roll
023	Slow_2	049	Urban Rock
024	Disco cha cha	050	Ballad
025	Guala cha	051	Jazz Ballad

NO	name	NO	name
052	C.Ballad	090	Square Beat
053	J.Ballad	091	Euro Beat
054	60s Slow Ballad	092	Alpha Dance
055	Piano Ballad	093	Beta Dance
056	50s Ballad	094	Dream Dance
057	Snake Base	095	Dance_1
058	Happy Blues	096	Dance_2
059	Old Blues	097	Dance_3
060	Blue Gras	098	RAP
061	Boodie_1	099	The Country
062	Boodie_2	100	Country Shuffle
063	Boodie_3	101	Electric Keys
064	Shuffle_1	102	Dark Keys
065	Shuffle_2	103	Easy Walk
066	Dream Shuffle	104	Destiny
067	Country Shuffle	105	Comedy
068	Quick Shuffle	106	Drive
069	Reggae Shuffle	107	Liquid Nova
070	R&B	108	Indonesian folk
071	Reggae_1	109	Absolute Music
072	Reggae_2	110	Jamaica
073	Reggae_3	111	Synthesis
074	Salsa _1	112	Feel
075	Salsa_2	113	Accelerate
076	Salsa_3	114	Beach Night
077	Tecno_1	115	Irish
078	Tecno_2	116	Tarantella
079	Funky_1	117	Big band
080	Funky_2	118	Dan
081	Dixie_1	119	Fusion
082	Dixie_2	120	Horse
083	Foxtrot_1	121	Canon
084	Foxtrot_2	122	Latin
085	R.roll_1	123	Mambo
086	R.roll_2	124	New age
087	Fast Beat	125	Slow rc
088	Quick Beat	126	Soul
089	Smooth Beat	127	Twist

IV. Schutz des E-Pianos:

1. Das E-Piano kann mit einem sauberen, weichen Tuch gereinigt werden.
2. Lagern Sie das E-Piano nach Gebrauch. Lagern Sie das E-Piano nicht an einem heißen oder feuchten Ort.

V. Vorsichtsmaßnahmen bei der Verwendung eines E-Pianos

. Keine Teile des E-Pianos zerbrechen.
. Das E-Piano nicht an einem heißen oder feuchten Ort aufstellen.
. Es nicht an einem Ort mit starken elektrischen Wellen aufstellen, um die Funktion nicht zu beeinträchtigen.

VI. Einfache Fehlerbehebung:

·Wenn der Ton ungewöhnlich ist oder die Tasten nicht richtig funktionieren, schalten Sie das Gerät aus und starten Sie es neu, um die ursprünglichen Einstellungen wiederherzustellen.

VII. Produktspezifikationen

1. Abmessungen (aufgeklappt): 1260 x 210 x 62 mm, Gewicht: 4,05 kg
2. Abmessungen (zusammengeklappt): 630 x 210 x 124 mm, Gewicht: 4,05 kg
3. Eingangsspannung: DC 12V/3A
4. Material: ABS

Vielen Dank, dass Sie sich für OYAYO entschieden haben!

Lieber Kunde,
Vielen Dank für Ihr Vertrauen und den Kauf unserer Musikinstrumente! Ihre Unterstützung ist die treibende Kraft für unser kontinuierliches Streben nach exzellenter Qualität. Wir bieten Ihnen stets ein hochwertiges Musikerlebnis mit professioneller Einstellung.

Verpflichtung zum Kundendienst
Für dieses Produkt gilt eine 1-jährige Garantie auf das gesamte Gerät (ab Kaufdatum).
Während der Garantiezeit bieten wir bei Qualitätsproblemen, die nicht auf menschliches Verschulden zurückzuführen sind, kostenlose Reparatur oder Ersatz an.
Bitte bewahren Sie den Kaufbeleg als Garantiegrundlage auf.

Kontaktieren Sie uns
Bei Problemen oder Verbesserungsvorschlägen können Sie uns gerne wie folgt kontaktieren:
Offizielle Kundendienst-E-Mail: ***support@oyayomusic.com***
Service-Antwort: Antwort innerhalb von 48 Stunden an Werktagen

Musik bewegt sich dank Ihnen. Wir freuen uns darauf, noch mehr schöne Momente mit Ihnen zu erleben!

OYAYO
Light up the Life with Music

お客様へ

このたびは弊社製品をお選びいただき、誠にありがとうございます。皆様からのご信頼とご支援に、心より感謝申し上げます。

弊社ブランドは、15年以上にわたり、電子ピアノ・電子ドラム・電子キーボードなどのポータブル電子楽器の開発・改良に取り組んでまいりました。私たちの使命は、創造性と音楽への探求心を刺激する、革新的かつ高品質なツールを提供することです。

本製品を最大限にご活用いただくために、本取扱説明書に記載の使用方法および注意事項をよくお読みのうえ、正しくお使いくださいますようお願いいたします。それにより、製品の性能を最大限に引き出し、より良い音楽体験をお楽しみいただけます。

本製品が、お客様に喜びと利便性、そして無限の音楽の可能性をもたらすことを心より願っております。ご不明な点やご質問がございましたら、いつでもお気軽に弊社カスタマーサポートまでご連絡ください。迅速かつ丁寧な対応を心がけております。

今後とも弊社製品をどうぞよろしくお願い申し上げます。
さあ、音楽の旅を始めましょう！

I、機能概要

- 折りたたみ式電子ピアノ
- 61鍵/88鍵の標準鍵盤（黒鍵を含む）
- 音色：128種類
- リズム：128種類
- デモ曲：20曲収録
- リズム機能
- デモ曲機能
- メトロノーム機能
- ノブボタン機能
- スリープモード選択機能
- コード機能
- デュアルキーボード機能
- ベロシティスイッチ機能
- LCDディスプレイ搭載
- サステインペダル対応
- Bluetooth MIDI / Bluetooth オーディオ機能
- 電源供給方式 ：
  1.内蔵リチウムバッテリー（3.7V / 1800mAh）
  2.外部USB 5V / 1A電源供給

II. 機能ボタンの説明:

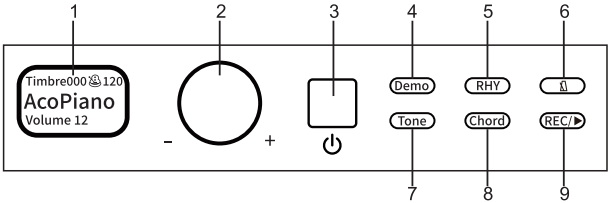

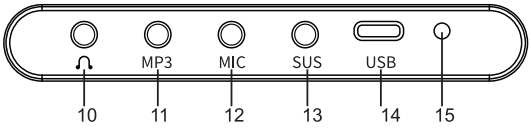

1		LCDディスプレイ	9	REC/▶	録音/再生ボタン
2		ノブボタン	10		ヘッドフォン端子
3		電源ボタン	11		オーディオ入力
4	Demo	デモ曲ボタン	12		マイク入力
5	RHY	リズムボタン	13		サステインペダル/フットスイッチ端子
6		メトロノームボタン	14		Type-C端子
7	Tone	音色ボタン	15		充電インジケーター
8	Chord	コードボタン			

III. 製品機能の説明:

1. 電源ボタン

電源ボタンを0.5秒間長押しすると電源がオンになります。
短押しで電源オフになります。

2. ノブボタン(音量VOLUME調整)

1. 初期状態では音量（VOLUME）調整モードになっています。ノブを左右に回して音量を調整します。
2. 音量は0〜16の範囲で調整可能で、初期設定は12です。
3. 短押しするとメニュー画面に入り、ノブを回して機能を選択できます。短押しでメニューに入り、再度短押しで機能を確定。3秒間操作しないと音量調整画面に戻ります。
4. どのモードでもノブを2秒間長押しすると、システムが初期状態にリセットされます。

3. デモボタン

「Demo」 ボタンを押すとデモ曲が再生され、もう一度「デモ」ボタンを押すと停止し、「ノブ」ボタンを左に回して右に回すと別のデモが選択されます。3秒間何も操作しないと音量モードに戻ります。

4.RHY ボタン

「RHY」ボタンを押すとリズムが再生され、もう一度「RHY」ボタンを押すと停止し、「ノブ」ボタンを左または右に回すと別のリズムを選択できます。3 秒間何も操作しないと、音量モードに戻ります。

5. 𝅘𝅥 ボタン

[𝅘𝅥]ボタンを押して再生し、[𝅘𝅥]ボタンを押して停止し、[つまみ]を左右に回してメトロノームを選択し、3秒間何も操作しないと音量インターフェースモードに戻ります。

6.トーンボタン

[Tone]ボタンを押し、[Knob]ボタンを左右に回して音色を選択し、3秒間何も操作せずにボリュームインターフェースモードに戻ります。

7. コードボタン

リズムを演奏中に「Chord」ボタンを押すと、1本指と複数指のコードモードに入ります。
コード機能：低音域、61鍵（C-f#間隔の19鍵）。88鍵（A2-f#l間隔の34鍵）でリズムを演奏し、リズムに合ったコードを演奏します。コードのピッチはキーのピッチに応じて変化します。
「Chord」ボタンを押すとコード機能がオン/オフになり、3秒間操作しないとボリュームインターフェイスモードに戻ります。

8. REC/▶ ボタン（録音/再生）

REC/▶ボタンを3秒間長押しすると録音開始。
短押しで録音を一時停止。
再度短押しで録音を再生、もう一度短押しで再生停止。

9. テンポ（TEMPO）

·短押しでテンポ調整モードに入り、ノブを回してテンポを選択します。
·軽く押してからノブを回すと、テンポは**-240～+240の範囲で調整可能です（初期設定は120**）。これはテンポのオフセットを示します。
·3秒間操作しないと音量調整画面に戻ります。

10. トランスポーズ（TRANS）

·短押しでトランスポーズ調整モードに入り、ノブを回して設定を選択します。
·軽く押してからノブを回すと、トランスポーズは**-6～+6の範囲で調整可能です（初期設定は0**）。
·3秒間操作しないと音量調整画面に戻ります。

11. デュアルキーボード（DKEYBOARD）

·短押しでデュアルキーボードモードを選択します。
·軽く押してからノブを回すと、デュアルキーボードのオン/オフを切り替えられます。
·3秒間操作しないと音量調整画面に戻ります。



分割前：A0～B3　　分割前：C4～C8
分割後：A1～B4　　分割後：C2～C6

12. ティーチング

1.「ノブ」ボタンを押し、「ノブ」ボタンを回して「teaching」を選択します
2.「ノブ」ボタンを押し、「ノブ」ボタンを回してティーチング モード（A モード、B モード、ティーチング オフ）を選択します。3 秒間何も操作しないと、音量モードに戻ります。

A モード: 別のデモを選択し、「デモ」ボタンを押して A モードに入ります。任意のキーを押すと、デモ曲のメイン メロディーが再生されます。
B モード: 別のデモを選択し、「デモ」ボタンを押して B モードに入ります。正しいキーを押すと音が鳴り、間違ったキーを押すと音が鳴りません。

13. サステイン

1.「ノブ」ボタンを押し、「ノブ」ボタンを回して「sustain」を選択します。
2.「ノブ」ボタンを押し、「ノブ」ボタンを左右に回してサステインを開くか閉じるかを選択します。サステイン機能をオンにすると、演奏中にサステイン効果のあるサウンドを作成できます。3秒間何も操作しないと、ボリュームモードに戻ります。

14. ビブラート

1.「ノブ」ボタンを押し、「ノブ」ボタンを回して「vibrato」を選択します。
2.「ノブ」ボタンを押し、「ノブ」ボタンを回してビブラートのオープンまたはクローズを選択します。ビブラート機能をオンにすると、演奏中にサウンドにビブラート効果が発生します。3秒間操作しないと、音量モードに戻ります

15. キーボードドラム

1.「ノブ」ボタンを押し、「ノブ」ボタンを回して「keyboard drum」を選択します。
2.「ノブ」ボタンを押し、「ノブ」ボタンを回して「keyboard drum」を開くか閉じるかを選択します。キーボードドラムがオンになると、すべてのキーがオンになり、パーカッション音になります。キーボードドラムがオフになると、パーカッション音はオフになります。3秒間何も操作しないと、音量モードに戻ります。

16. ダイナミック

1.「ノブ」ボタンを押し、「ノブ」ボタンを回して「dynamic」を選択します。
2.「ノブ」ボタンを押し、「ノブ」ボタンを回してダイナミックのオープンまたはクローズを選択します。ダイナミックスイッチをオンに選択すると、キーが強く押され、再生される音が大きくなります。デフォルトはオンです。3秒間何も操作しないと、音量モードに戻ります。

17. 休眠モード(SLEEPMODE)

・短押しで「sleep」モードを選択します。
・軽く押してからノブを回すと、休眠モードのオン/オフを切り替えられます。
・休眠モードがオンの状態で、10分間操作しないと自動的にシャットダウンします。この場合、電源ボタンを押して再起動する必要があります。

·休眠モードの初期設定はオンです。
·3秒間操作しないと音量調整画面に戻ります。

18. LEDインジケーター

赤色LEDインジケーターは充電の表示です。内蔵リチウムバッテリーが満充電でない場合、USB 5V電源を接続すると赤色のLEDが点灯します。
バッテリーが満充電になると、LEDインジケーターが緑色に変わります。

19. Bluetooth MIDI 機能

Bluetoothを使用して、iPhoneやiPadのピアノ学習アプリ（例：GarageBand、Perfect Pianoなど）にワイヤレス接続できます。接続方法（GarageBandを例に）：iPhoneまたはiPadにGarageBandアプリをインストールします。アプリを開き、画面右上の「設定」アイコンをタップし、「詳細設定」から「Bluetooth MIDIデバイス」を選択します。Bluetooth MIDIデバイスのリストから、MIDI-Piano(PJ88C版)/GZUT-MIDI(PJ88CPro版）を選び、接続をクリックすると、正常に使用できます。
接続できない場合は、電子ピアノを再起動してください。（Bluetooth MIDI機能付きのモデルのみ対応）

20. Bluetooth オーディオ機能

電源をオンにすると、Bluetooth機能が自動的にオンになり、接続待機状態になります。
スマートフォンが**Music-Piano(PJ88C版)/GZUT-MUSIC(PJ88C Pro版)**を検索し、接続します。接続成功後、音が鳴ります。音量や音楽の選択は、スマートフォンで行います。
（Bluetoothオーディオ機能付きのモデルのみ対応）

21. キーボードライト(LED)

·電源を入れると、デフォルトでキーボードライトが点灯します。短押しでキーボードライトモードに入り、ノブを回してキーボードライト（LED）のオン/オフを選択します。
·軽く押してからノブを回すと、キーボードライトのオン/オフを切り替えられます。キーボードライトをオンにすると、演奏中に押したキーに対応するライトが点灯します。MIDIアプリ（APP）やPCのMIDIソフトウェアとも連携して、キーのライトが連動します。（LED付きのモデルのみ対応）

付属品1:デモリスト

NO	name	NO	name
000	Croatian Rhapsody	010	Bandari
001	By Alice	011	Castle in the Sky
002	A comme amour	012	Song of Joy
003	Green Sleeves	013	Edelweiss
004	Dream Wedding	014	Dance of fireflie
005	Romance De Amor	015	My soul
006	Dancing Girl	016	CSIKOS POST
007	CrystlLake	017	Rhythm Of The Rain
008	Les premiers sourires de Vanessa	018	The Maiden's Prayer
009	Snowdreams	019	The Blue Danube

付属品2:トーンリスト

NO	name	NO	name
	Piano	022	Harmonica
000	Piano 1	023	Bandoneon
001	Piano 2		Guitar
002	Piano 3	024	Acoustic Guitar (nylon)
003	Honky-Tonk Piano	025	Acoustic Guitar(steel)
004	Rhodes Piano	026	Electric Guitar (jazz)
005	Chorused Piano	027	Electric Guitar (clean)
006	Harpsichord	028	Electric Guitar (muted)
007	Clavinet	029	Overdriven Guitar
	Percussion	030	Distortion Guitar
008	Celesta	031	Guitar Harmonics
009	Glockenspiel		Bass
010	Music Box	032	Acoustic Bass
011	Vibraphone	033	Electric Bass(finger)
012	Marimba	034	Electric Bass(pick)
013	Xylophone	035	Fretless Bass
014	Tubular Bells	036	Slap Bass 1
015	Santur	037	Slap Bass 2
	Organ	038	Synth Bass 1
016	Hammond Organ	039	Synth Bass 2
017	Percussive Organ		String Solo
018	Rock Organ	040	Violin
019	Church Organ	041	Viola
020	Reed Organ	042	Cello
021	Accordion	043	Contrabass

NO	name	NO	name
044	Tremolo Strings	078	Whistle
045	Pizzicato Strings	079	Ocarina
046	Orchestral Harp		Synthetic tonic
047	Timpani	080	Lead 1 (square)
	Chorus	081	Lead 2 (sawtooth)
048	String Ensemble 1	082	Lead 3 (calliope lead)
049	String Ensemble 2	083	Lead 4 (chiff lead)
050	SynthStrings 1	084	Lead 5 (charang)
051	SynthStrings 2	085	Lead 6 (voice)
052	Choir Aahs	086	Lead 7 (fifths)
053	Voice Oohs	087	Lead 8 (bass+lead)
054	Synth Voice		Synthetic soft tone
055	Orchestra Hit	088	Pad 1 (new age)
	Brass instrument	089	Pad 2 (warm)
056	Trumpet	090	Pad 3 (polysynth)
057	Trombone	091	Pad 4 (choir)
058	Tuba	092	Pad 5 (bowed)
059	Muted Trumpet	093	Pad 6 (metallic)
060	French Horn	094	Pad 7 (halo)
061	Brass Section	095	Pad 8 (sweep)
062	Synth Brass 1		Synthetic effects
063	Synth Brass 2	096	FX 1 (rain)
	Reed instrument	097	FX 2 (soundtrack)
064	Soprano Sax	098	FX 3 (crystal)
065	Alto Sax	099	FX 4 (atmosphere)
066	Tenor Sax	100	FX 5 (brightness)
067	Baritone Sax	101	FX 6 (goblins)
068	Oboe	102	FX 7 (echoes)
069	English Horn	103	FX 8 (sci-fi)
070	Bassoon		Tribal instrument
071	Clarinet	104	Sitar
	Wind instrument	105	Banjo
072	Piccolo	106	Shamisen
073	Flute	107	Koto
074	Recorder	108	alimba
075	Pan Flute	109	Bagpipe
076	Bottle Blow	110	Fiddle
077	Skakuhachi	111	Shanai

NO	name	NO	name
	Percussion		Sound effects
112	Tinkle Bell	120	Guitar Fret Noise
113	Agogo	121	Breath Noise
114	Steel Drums	122	Seashore
115	Woodblock	123	Bird Tweet
116	Taiko Drum	124	Telephone Ring
117	Melodic Tom	125	Helicopter
118	Synth Drum	126	Applause
119	Reverse Cymbal	127	Gun shot

付属品3:リズムリスト

NO	name	NO	name
000	Beguines Wing	026	Char
001	Beguine_2	027	Samba_1
002	Beguine_3	028	Samba_2
003	Pop hit	029	Ubminimal
004	Pop	030	8Bit_1
005	Pop Malay	031	8Bit_2
006	Bossa nova	032	16Bit_1
007	Disco _1	033	16bit_2
008	Disco_2	034	Ballad_16T
009	Blue grass disco	035	Country_16T
010	Waltzl_1	036	Tango_1
011	Waltzl_2	037	Tango _2
012	True ballad waltz	038	Polka_1
013	Bossa Waltz	039	Polka _2
014	Easy Waltz	040	Pop Swing
015	Shuffle Waltz	041	Easy Swing
016	Reggae Waltz	042	Soft Swing
017	Rumba Waltz	043	Rock_1
018	March_1	044	Rock_2
019	March_2	045	Rock_3
020	Rumba _1	046	Airy Rock
021	Rumba_2	047	Heart Rock
022	Slow_1	048	Rock & Roll
023	Slow_2	049	Urban Rock
024	Disco cha cha	050	Ballad
025	Guala cha	051	Jazz Ballad

NO	name	NO	name
052	C.Ballad	090	Square Beat
053	J.Ballad	091	Euro Beat
054	60s Slow Ballad	092	Alpha Dance
055	Piano Ballad	093	Beta Dance
056	50s Ballad	094	Dream Dance
057	Snake Base	095	Dance_1
058	Happy Blues	096	Dance_2
059	Old Blues	097	Dance_3
060	Blue Gras	098	RAP
061	Boodie_1	099	The Country
062	Boodie_2	100	Country Shuffle
063	Boodie_3	101	Electric Keys
064	Shuffle_1	102	Dark Keys
065	Shuffle_2	103	Easy Walk
066	Dream Shuffle	104	Destiny
067	Country Shuffle	105	Comedy
068	Quick Shuffle	106	Drive
069	Reggae Shuffle	107	Liquid Nova
070	R&B	108	Indonesian folk
071	Reggae_1	109	Absolute Music
072	Reggae_2	110	Jamaica
073	Reggae_3	111	Synthesis
074	Salsa _1	112	Feel
075	Salsa_2	113	Accelerate
076	Salsa_3	114	Beach Night
077	Tecno_1	115	Irish
078	Tecno_2	116	Tarantella
079	Funky_1	117	Big band
080	Funky_2	118	Dan
081	Dixie_1	119	Fusion
082	Dixie_2	120	Horse
083	Foxtrot_1	121	Canon
084	Foxtrot_2	122	Latin
085	R.roll_1	123	Mambo
086	R.roll_2	124	New age
087	Fast Beat	125	Slow rc
088	Quick Beat	126	Soul
089	Smooth Beat	127	Twist

IV、電子ピアノの保護:

・柔らかく清潔な布で電子ピアノを拭いてください。
・使用後は適切に保管し、高温多湿の場所に置かないでください。

V、電子ピアノ使用時の注意事項:

・本体底部の電源スイッチを押してから、左右の鍵盤を折りたたんでください。
・折りたたんだ左右の鍵盤を広げてまっすぐにすると、鍵盤が開きます。
・本体のメンテナンスは専門の技術者のみが行ってください。
・左右の本体間の接続ケーブルを無理に引っ張らないでください。
・電子ピアノを高温や湿気の多い場所に置かないでください。
・強い電流の発生する場所には置かないでください。電子ピアノの機能に影響を与える可能性があります。

VI、簡単な故障の解決方法:

・音が異常だったり、鍵盤が反応しない場合は、電源を入れ直し、初期設定に戻してください。

VII、製品仕様

1. 製品サイズ（展開時）：1260*210*62mm、重量：4.05kg
   製品サイズ（折りたたみ時）：630*210*124mm、重量：4.05kg
2. 入力電圧：DC 12V/3A
3. 材質：ABS

OYAYOをお選びいただきありがとうございます。
お客様へ：
この度は当社の楽器をお選びいただき、心より感謝申し上げます。お客様のご支援は、当社が優れた品質を追求し続けるための大きな力となっております。これからもプロフェッショナルな姿勢で、高品質な音楽体験をお届けいたします。

アフターサービスについて
本製品には、全体的に1年間の保証サービスが提供されます（受領日から計算）。 保証期間内に人為的要因以外で製品に問題が発生した場合、無料で修理または交換サービスを提供いたします。
保証を受けるために、購入領収書の保管をお願い申し上げます。

お問い合わせ
使用中に問題が発生したり、改善のご提案がある場合は、以下の方法でお気軽にお問い合わせください：
公式アフターサービスメール：***support@oyayomusic.com***
サービス対応：営業日内に48時間以内に返信いたします。

音楽はあなたのおかげで動きます。あなたと共に、さらに素晴らしい瞬間を創り出すことを楽しみにしております！

OYAYO
Light up the Life with Music