



**Folding Electronic Piano
User Manual**

**Zusammenklappbares elek-
tronisches Klavier-Bedienung-
sanleitung**

**折りたたみ式電子ピアノ
取扱説明書**

Light up the Life with Music

Dear Customer,

Thank you for choosing our product! We are deeply honored by your trust and support. For over 15 years, our brand has been dedicated to designing and refining portable electronic musical instruments, including electronic pianos, electronic drums, electronic keyboards, and more. Our mission is to deliver innovative, high-quality tools that inspire creativity and musical exploration. To ensure the best use of your instrument, we strongly recommend that you carefully read and follow the instructions and precautions outlined in this manual. This will help you to fully utilize the potential of your equipment while safeguarding your experience.


We sincerely hope this product brings you joy, convenience, and endless musical possibilities. Should you have any questions, concerns, or feedback, please do not hesitate to contact our customer service team. We are committed to providing prompt and professional support to enhance your journey with us.



Thank you once again for being part of our story. Let the music begin!

I. Product function introduction :

- Folding electronic piano
- 61/88 standard keys (includes black key)
- Tone 129 tones
- RHY:128 rhythms
- Demo:60 demos
- Rhythm function
- Demo function
- Metronome function
- Knob button function
- 10W Dual Stereo Speakers
- Sleeping function
- Chord function
- Dual keyboard function
- Dynamic function
- LCD display
- Sustain pedal
- Blue-tooth MIDI/Blue-tooth audio function
- Power supply: 1. Built-in lithium battery 7.4V/1800mAh
2. External DC 12V/3A

II. Function button description:

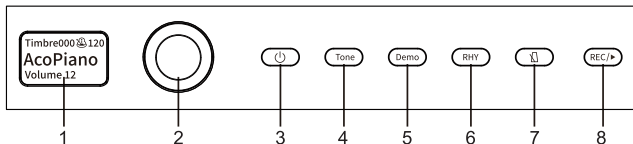

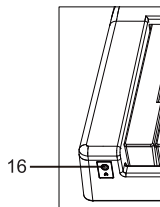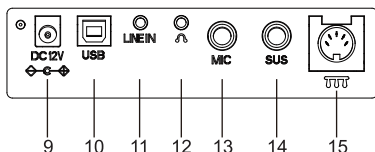

1		LCD screen	9		DC 12V/3A
2		Knob button	10		USB-B interface
3		ON/OFF	11		Audio input
4	Tone	Tone button	12		Speaker jack at back
5	Demo	Demo button	13		MIC input
6	RHY	Rhythm button	14		Sustain pedal interface
7		Metronome button	15		Three foot pedal interface
8	REC/▶	Record/Play button	16		Speaker jack at front

III. Product function description:

1.ON/OFF button

Press this button about 0.5 seconds will turn on, repress will turn off.

2. Knob button (Volume adjust)

1. The power-on defaults is the volume adjustment mode, rotate left and right to select the volume level.
2. The volume can be selected from 0-15 level, the default is 12 level.
3. Press "Knob"button to enter the menu, rotate "Knob"button left and right to enter the selection function, firstly press to enter the menu setting, repress to enter the function confirmation.Press for 0.5 seconds to return to the upper menu. Return to volume mold without any operation for 3 seconds.
4. Under volume mold, press"Knob"button for 2 seconds, the system restores to the default state.

3. Tone button

With 129 tones, press "Tone" button, the screen will display the tone number "Timbre000", rotate the "Knob" left and right to select the tone, tone number changes, return to volume mold without any operation for 3 seconds.

4. RHY button

With 128 rhythms, press "RHY" button automatically enter playing, the screen will display "Rhythm 000", rotate the "Knob" left and right to select the rhythm, repress "RHY" button to stop Return to volume mold without any operation for 3 seconds.

5. button

Press "" button to play. Rotate "Knob" left and right to select the beat. Repress "" to stop. Return to volume mold without any operation for 3 seconds.

6. Demo button

With 60 demos, press "Demo" button to play, rotate "Knob" left and right to select the demo, repress "Demo" to stop, return to volume mold without any operation for 3 seconds

Remark: Turn on or turn off the reverb effect through press "Demo" for long time

7. Sustain

1. Press "Knob" button, rotate it to select Sustain function.
2. Press "" button, then rotate it left and right, to select the sustain open or dose. When Sustain is on, the melody will with sustain effect during playing. It will return to the volume interface mode without any operation for 3 seconds.

8. Dual keyboard

Press "Knob" button, rotate "Knob" button to select Split key. Press "Knob" button, rotate "Knob" left and right to select dual keyboard open or close, the dual keyboard has the same pitch of the left and right three octaves. Return to volume mold without any operation for 3 seconds.



9. Double Voice

Press the "Knob" button, rotate the "Knob" button to select Double Voice. Press the "Knob" button, then rotate the "Knob" button left and right to select Double Voice open or close. It will return to the volume interface mode without any operation for 3 seconds.

10. Chord button

Press "Chord" button, can open or close the chord function.

11. REC/ ► button

Press "REC/ ►" for 3 seconds to record, the screen will display "Record ON", repress stop recording, the screen will display "Record OFF", repress "REC/ ►" can play what you record, the screen will display "Playback ON", repress to stop, the screen will display "Playback OFF".

12. Dynamic

Press "Knob" button, rotate "Knob" to select dynamic, after press "Knob" button, rotate left and right to select the dynamic open or close, when the dynamic switch is selected to be on, the keys are pressed harder, and the sound played out is louder. The default is on. Return to volume mold without any operation for 3 seconds.

13. Sleep-mode

Press "Knob" button, rotate "Knob" to select the sleep-mode.

Press "Knob" button, rotate "Knob" left and right to select sleep-mode open or close. After the sleep mode is turned on, there is no action for ten minutes, and it enters the shutdown state. At this time, you need to press the power button to restart.

14. Vibrato

Press the [Knob] button to display the current function menu, rotate the [Knob] button to select vibrato, then press the [Knob] button to confirm the selection, rotate the [Knob] button left and right to turn on or off the vibrato function, short press the [Knob] button to exit the function modification. Return to the volume interface mode without any operation for 3 seconds.

15. Tempo

Press "Knob" button, rotate "Knob" button to select the tempo speed. Press "Knob" button, tempo speed can be selected from 40 to 280, the default is 120, return to volume mold without any operation for 3 seconds.

16. Trans

Press "Knob" button, rotate "Knob" button to select transpose. Press "Knob" button, transposition can be selected from -6 to +6, the default is 0, return to volume mold without any operation for 3 seconds.

17. Mic Volume

Press the [knob] button, rotate the [knob] button to select Mic Volume. Press the [knob] button, then rotate the [knob] button left and right to adjust the microphone volume, the volume can be selected from 0 to 32. The default volume is 25. Return to volume mold without any operation for 3 seconds.

18. LED indicator

The red indicator light is the charging indicator. When the built-in lithium battery is not fully charged, plug in the DC 12V power supply to charge. The red LED indicator light is off when the battery is fully charged.

19. Blue-tooth MIDI function

Through Bluetooth, you can wirelessly connect to piano learning apps on iPhone or iPads, such as GarageBand, Singing Bar and Perfect Piano and other professional apps. Specific connection (take GarageBand as an example); Download GarageBand software on your iPhone or tablet, Open the software,

select the "Settings" icon on the top right to enter the column, select "Advanced", select the Bluetooth MIDI device, select BLE-MIDI in the Bluetooth MIDI device, and click connect, and you can use it normally (if it fails to connect, please Restart the electric organ)

(Only applicable to the version with Bluetooth MIDI)

20. Blue-tooth audio function

After booting, the Bluetooth function is automatically turned on and there is a prompt tone. Bluetooth is turned on and waiting for the connected mobile phone to play accompaniment or music. The mobile phone searches for Music-Piano to connect. After the connection is successful, there will be a prompt tone. Volume increase or decrease or music selection needs to be performed on the mobile phone.

(Only applicable to the version with Bluetooth audio)

Accessory one: lists of demo

NO	name	NO	name
000	Concerto D'Amour	030	The Blue Danube Waltz
001	Dream of Love	031	LetItGo
002	Minuet From L'Arlesienne	032	Mary had a little lamb
003	The River of Babylon	033	American patro
004	BachSong	034	MARIAGE D' AMOUR
005	Beethoven Piano Sonatas	035	The Magic Flute-overture
006	Cancan	036	Mozart
007	Come Back To Sorrento	037	Mozart symphony.
008	Clarinet Polka	038	The Fountain
009	cuckoo waltz	039	A Comme Amour
010	Russian dance music	040	Unchained Melody
011	Merry widow waltz	041	santa lucia
012	Minuet in G	042	Troika
013	Dove	043	The Maiden's Prayer
014	OldFranc	044	Santa Claus is Coming to Town
015	Haydn serenade	045	Schubert Serenade
016	Ode to Joy	046	Ballade pour Adeline
017	Dance of the Flowers	047	Four Seasons Spring March
018	Innocent	048	Swan Lake
019	Parade March	049	Susannah
020	Gewolt	050	Turkish March
021	March Militaire	051	Smile polka
022	Triumphal March	052	my heart will go on
023	Carmen aragon	053	Pour Elise
024	Carman Overture	054	Chopin Nocturnes
025	canon	055	MINUTE WALTZ
026	Katyusha	056	Spain Matador March
027	Lovely Smurf	057	Hungarian Dance
028	Clementine sonata	058	Edelweiss
029	Croatian Rhapsody	059	Flight of the Bumble Bee

Accessory two: lists of tone

NO	name	NO	name
	Piano	033	Electric Bass(finger)
000	Acoustic Grand Piano	034	Electric Bass (pick)
001	Bright Acoustic Piano	035	Fretless Bass
002	Electric Grand Piano	036	Slap Bass 1
003	Honky-tonk Piano	037	Slap Bass 2
004	Rhodes Piano	038	Synth Bass 1
005	Chorused Piano	039	Synth Bass 2
006	Harpsichord		Strings
007	Clavichord	040	Violin
	Color percussion	041	Viola
008	Celesta	042	Cello
009	Glockenspiel	043	Contrabass
010	Music box	044	Tremolo Strings
011	Vibraphone	045	Pizzicato Strings
012	Marimba	046	Orchestral Harp
013	Xylophone	047	Timpani
014	Tubular Bells		Ensemble/Chorus
015	Dulcimer	048	String Ensemble 1
	Organ	049	String Ensemble 2
016	Hammond Organ	050	Synth Strings 1
017	Percussive Organ	051	Synth Strings 2
018	Rock Organ	052	Choir Aahs
019	Church Organ	053	Voice Oohs
020	Reed Organ	054	Synth Voice
021	Accordion	055	Orchestra Hit
022	Harmonica		Copper tube
023	Tango Accordion	056	Trumpet
	Guitar	057	Trombone
024	Acoustic Guitar (nylon)	058	Tuba
025	Acoustic Guitar (steel)	059	Muted Trumpet
026	Electric Guitar (jazz)	060	French Horn
027	Electric Guitar (clean)	061	Brass Section
028	Electric Guitar (muted)	062	Synth Brass 1
029	Overdriven Guitar	063	Synth Brass 2
030	Distortion Guitar		Reed pipe
031	Guitar Harmonics	064	Soprano Sax
	Bass	065	Alto Sax
032	Acoustic Bass	066	Tenor Sax

NO	name	NO	name
067	Baritone Sax	098	FX 3 (crystal)
068	Oboe	099	FX 4 (atmosphere)
069	English Horn	100	FX 5 (brightness)
070	Bassoon	101	FX 6 (goblins)
071	Clarinet	102	FX 7 (echoes)
	Flute	103	FX 8 (sci-fi)
072	Piccolo		Folk musical instrument
073	Flute	104	Sitar
074	Recorder	105	Banjo
075	Pan Flute	106	Shamisen
076	Bottle Blow	107	Koto
077	Shakuhachi	108	Kalimba
078	Whistle	109	Bagpipe
079	Ocarina	110	Fiddle
	Synthetic tonic	111	Shanai
080	Lead 1 (square)		Percussion
081	Lead 2 (sawtooth)	112	Tinkle Bell
082	Lead 3 (caliope lead)	113	Agogo
083	Lead 4 (chiff lead)	114	Steel Drums
084	Lead 5 (charang)	115	Woodblock
085	Lead 6 (voice)	116	Taiko Drum
086	Lead 7 (fifths)	117	Melodic Tom
087	Lead 8 (bass+lead)	118	Synth Drum
	Synthetic Voice	119	Reverse Cymbal
088	Pad 1 (new age)		Sound effect
089	Pad 2 (warm)	120	Guitar Fret Noise
090	Pad 3 (polysynth)	121	Breath Noise
091	Pad 4 (choir)	122	Seashore
092	Pad 5 (bowed)	123	Bird Tweet
093	Pad 6 (metallic)	124	Telephone Ring
094	Pad 7 (halo)	125	Helicopter
095	Pad 8 (sweep)	126	Applause
	Synthetic effect	127	Gunshot
096	FX 1 (rain)	128	Drum
097	FX 2 (soundtrack)		

Accessory three: lists of rhythm

NO	name	NO	name
000	80sPop	038	Funk pop
001	16beat1	039	Rock waltz
002	8Ballad	040	Mideast
003	Soul1	041	Jazz waltz1
004	70sRock	042	Jazz waltz2
005	Afro pop	043	16Beat tune
006	Samba pop	044	Polka2
007	60sSoul	045	Waltz
008	70sSoul	046	African
009	Funky	047	Swing1
010	16Beat slide	048	Vallenato
011	Pop dance1	049	Bequine
012	Pop dance2	050	Samba1
013	Hard rock	051	Samba2
014	Fusion jazz	052	Tango1
015	Funk slide	053	Tango2
016	Aor	054	House1
017	Love ballad1	055	Jazz waltz
018	Love ballad2	056	Bolero
019	Funky soul	057	New soul
020	Classic pop	058	Bossa nova3
021	c&w1	059	Shuffle1
022	c&w2	060	Shuffle2
023	Bossa noval1	061	House2
024	Rock roll	062	Merengue1
025	Rock cha-cha	063	Salsa
026	Baiao	064	Latin swing
027	Pop dance3	065	Thailand
028	Bachata	066	Reggae1
029	Bossa noval2	067	Soul2
030	Polka1	068	Soul3
031	Blues1	069	Merengue2
032	80sSoul	070	Polka3
033	90sSoul	071	16Reggae
034	Popular waltz	072	Slow rock1
035	American march	073	Slow rock2
036	Tango	074	Slow soul3
037	Tarante	075	Jorpo

NO	name	NO	name
076	Lambada	102	Rhumba3
077	Love ballad3	103	Jazz Samba
078	Plena	104	Rhumba4
079	China1	105	Funk Samba
080	Acid	106	Rhumba5
081	8Beat modern	107	Samba3
082	Country folk	108	Hard beat
083	Soul4	109	Mambo1
084	City pop	110	Disco soul
085	Calypso	111	Mambo2
086	Love ballad4	112	Cobmo
087	Love ballad5	113	Swing beat
088	Soul5	114	China3
089	Bluegrass	115	Band marche1
090	16beat2	116	Band marche2
091	China2	117	Band marche3
092	Soul6	118	Big band1
093	Kinetic1	119	Big band2
094	Kinetic2	120	Soul7
095	Funk disco	121	Soul8
096	Cobmo disco	122	Swing2
097	Twist	123	Swing3
098	Euro beat	124	Swing4
099	Rhumba1	125	Habanera
100	Euro soul	126	Bachata1
101	Rhumba2	127	Bachata2

IV. Protection of electric piano:

1. The electric piano can be cleaned with a clean soft towel.
2. Store the electric piano after use. Do not store the electric piano in a hot and humid place.

V. Precautions for using electronic piano

- Do not split any part of the electric piano.
- Do not place the electric piano in a hot or humid place.
- Do not put it in a place with strong electric waves, so as not to affect the function.

VI. Simple troubleshooting:

- If the sound is abnormal or the keys fail, please turn off the power and restart the machine to restore the original settings.
- If the battery voltage is low, there may be problems such as abnormal sound and keyboard failure, please charge it in time.

VII. Product specifications

1. Product size (unfolded): 1260*245*70mm, weight: 5.05kg
Product size (folded): 630*245*140mm, weight: 5.05kg
2. Input voltage: DC 12V/3A
3. Material: ABS

Thank you for choosing OYAYO!

Dear Customer:

Thanks for your trust and purchase of our musical instruments! Your support is the driving force for our continuous pursuit of excellent quality. We will always provide you with a high-quality music experience with a professional attitude.

After-sales Service Commitment

This product enjoys a 1-year warranty service for the whole machine (calculated from the date of receipt)

During the warranty period, if there are product quality problems caused by non-human factors, we will provide free repair or replacement services

Please keep the purchase receipt as the basis for warranty

Contact us

If you encounter any problems during use or have suggestions for improvement, please feel free to contact us through the following methods:

Official after-sales email: ***support@oyayomusic.com***

Service response: reply within 48 hours on working days

Music is moving because of you, looking forward to creating more wonderful moments with you!

OYAYO

Light up the Life with Music

Sehr geehrte Kundin, sehr geehrter Kunde,
Vielen Dank, dass Sie sich für unser Produkt entschieden haben! Wir freuen uns sehr über Ihr Vertrauen und Ihre Unterstützung. Seit über 15 Jahren entwickelt und verfeinert unsere Marke tragbare elektronische Musikinstrumente, darunter E-Pianos, E-Drums, E-Keyboards und mehr. Unsere Mission ist es, innovative, hochwertige Instrumente zu entwickeln, die Kreativität und musikalische Entdeckungen inspirieren.

Um Ihr Instrument optimal nutzen zu können, empfehlen wir Ihnen dringend, die Anweisungen und Vorsichtsmaßnahmen in dieser Anleitung sorgfältig zu lesen und zu befolgen. So können Sie das Potenzial Ihres Instruments voll ausschöpfen und gleichzeitig Ihr Erlebnis schützen.


Wir hoffen aufrichtig, dass Ihnen dieses Produkt Freude, Komfort und endlose musikalische Möglichkeiten bietet. Bei Fragen, Anliegen oder Feedback wenden Sie sich bitte an unseren Kundenservice. Wir sind bestrebt, Ihnen schnell und professionell zu helfen, um Ihre Erfahrung mit uns zu verbessern.



Nochmals vielen Dank, dass Sie Teil unserer Geschichte sind. Lasst die Musik beginnen!

I. Einführung in die Produktfunktion:

- | | |
|---|---|
| ● Klappbares E-Piano | ● 10 W Dual-Stereo-Lautsprecher |
| ● 61/88 Standardschlüssel
(Einschließlich Schwarzem Schlüssel) | ● Schlaffunktion |
| ● Ton: 129 Töne | ● Akkordfunktion |
| ● RHY: 128 Rhythmen | ● Doppelte Tastaturfunktion |
| ● Demo: 60 Demos | ● Dynamische Funktion |
| ● Rhythmusfunktion | ● LCD-Anzeige |
| ● Demofunktion | ● Sustain-Pedal |
| ● Metronomfunktion | ● Bluetooth-MIDI/Bluetooth-Audiofunktion |
| ● Knopffunktion | ● Stromversorgung:
1. Eingebauter Akku 7.4V/1800mAh mAh
2. DC 12V/3A Versorgung |

II. Function button description:

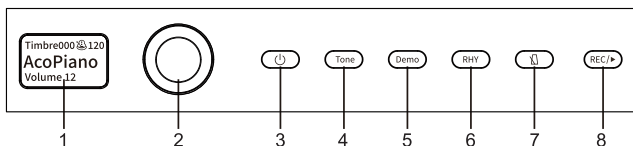

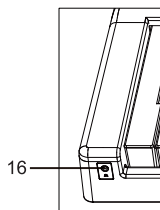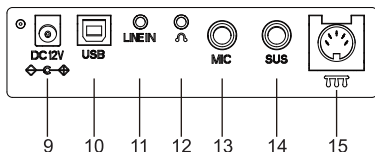

1		LCD-Anzeigebildschirm	9		Gleichstrom 12V/3A
2		Drehknopf	10		USB-B-Schnittstelle
3		ON/OFF	11		Audioeingang
4	Tone	Tontaste	12		Anschlüsse hintere lautsprecher
5	Demo	Demo-Taste	13		MIC-Eingang
6	RHY	Rhythmus-Taste	14		Sustain-Pedalschnittstelle
7		Metronom-Taste	15		Drei-Fuß-Pedal-Schnittstelle
8	REC/▶	Aufnahme-/Wiedergabetaste	16		Lautsprecheranschluss vorne

III. Produktfunktionsbeschreibung:

1. ON/OFF-Taste

Drücken Sie diese Taste etwa 0,5 Sekunden lang, um sie einzuschalten, und durch erneutes Drücken wird sie ausgeschaltet.

2. Knopf (Lautstärke einstellen)

- Die Standardeinstellung beim Einschalten ist der Lautstärkeanpassungsmodus. Drehen Sie nach links und rechts, um den auszuwählen Lautstärkepegel.
- Die Lautstärke kann zwischen 0 und 15 Stufen gewählt werden, die Standardeinstellung ist 12 Stufen.
- Drücken Sie die „Knopf“-Taste, um das Menü aufzurufen, drehen Sie die „Knopf“-Taste nach links und rechts, um die Auswahlfunktion aufzurufen. Drücken Sie zuerst, um die Menüeinstellung aufzurufen, drücken Sie erneut, um die Funktionsbestätigung aufzurufen. 0,5 Sekunden lang drücken, um zum oberen Menü zurückzukehren. Kehren Sie 3 Sekunden lang ohne Bedienung

zur Volumenform zurück.

4. Drücken Sie unter der Volumeneinstellung den „Knopf“-Knopf 2 Sekunden lang, das System stellt die Standardeinstellungen wieder her zustand.

3. Tontaste

Bei 129 Tönen drücken Sie die „Tone“-Taste. Auf dem Bildschirm wird die Tonnummer „Timbre000“ angezeigt. Drehen Sie den „Knopf“ nach links und rechts, um den Ton auszuwählen. Die Tonnummer ändert sich. Kehren Sie 3 Sekunden lang ohne Bedienung zur Lautstärkeregelung zurück.

4.RHY-Taste

Bei 128 Rhythmen drücken Sie die „RHY“-Taste, um automatisch mit der Wiedergabe zu beginnen. Auf dem Bildschirm wird „Rhythm000“ angezeigt. Drehen Sie den „Knopf“ nach links und rechts, um den Rhythmus auszuwählen. Drücken Sie die „RHY“-Taste erneut, um zu stoppen. Kehren Sie 3 Sekunden lang ohne Bedienung zur Lautstärke zurück Sekunden.

5. Taste

Drücken Sie die Taste „“ zum Abspielen. Drehen Sie den „Knob“ nach links/rechts, um den Beat auszuwählen. Erneut Taste „“ drücken, um zu stoppen. Bei 3 Sekunden Inaktivität wird automatisch zum Lautstärkemode zurückgekehrt.

6. Demo-Taste

Drücken Sie bei 60 Demos die „Demo“-Taste zum Abspielen, drehen Sie den „Knopf“ nach links und rechts, um die Demo auszuwählen. Drücken Sie „Demo“ erneut, um zu stoppen, und kehren Sie 3 Sekunden lang ohne Bedienung zur Volumenform zurück.

Anmerkung: Schalten Sie den Halleffekt ein oder aus, indem Sie lange auf „Demo“ drücken.


7. Sustain

1. Drücken Sie den „Knopf“ und drehen Sie ihn, um die Sustain-Funktion auszuwählen.
2. Drücken Sie den „Knopf“ und drehen Sie ihn dann nach links und rechts, um Sustain offen oder geschlossen auszuwählen. Wenn Sustain eingeschaltet ist,

wird die Melodie während der Wiedergabe mit Sustain-Effekt wiedergegeben. Ohne Bedienung kehrt sie 3 Sekunden lang in den Lautstärke-Schnittstellenmodus zurück.

8. Dual-Tastatur

Drücken Sie die „Knopf“-Taste und drehen Sie den „Knopf“-Knopf, um die Split-Taste auszuwählen. Drücken Sie die „Knopf“-Taste, drehen Sie den „Knopf“ nach links und rechts, um das Öffnen oder Schließen der Doppeltastatur auszuwählen. Die Doppeltastatur hat die gleiche Tonhöhe der linken und rechten drei Oktaven. Kehren Sie 3 Sekunden lang ohne Bedienung zur Volumenform zurück.

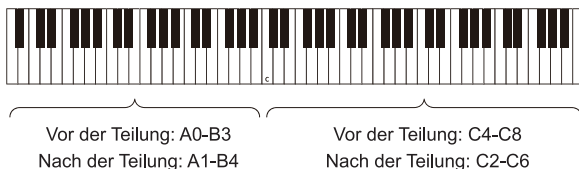

9. Double Voice

Drücken Sie die „Knob“-Taste und drehen Sie den Knopf, um „Double Voice“ auszuwählen. Drücken Sie die „Knob“-Taste erneut und drehen Sie sie nach links/rechts, um die Funktion ein- oder auszuschalten. Nach 3 Sekunden Inaktivität wird automatisch zum Lautstärkemode zurückgekehrt.

10. Akkord-Taste

Drücken Sie die „Chord“-Taste, um die Akkordfunktion zu öffnen oder zu schließen.

11. REC/ ► -Taste

Halten Sie die „REC/ ►“-Taste 3 Sekunden gedrückt, um eine Aufnahme zu starten. Das Display zeigt „Record On“. Drücken Sie die Taste erneut, um die Aufnahme zu stoppen. Das Display wechselt zu „Record OFF“.

Drücken Sie „REC/ ►“ erneut, um die Aufnahme abzuspielen. Das Display zeigt „Playback ON“. Ein weiterer Druck stoppt die Wiedergabe, und das Display zeigt „Playback OFF“.

12. Dynamisch

Drücken Sie die „Knopf“-Taste und drehen Sie den „Knopf“, um „Dynamik“ auszuwählen. Nachdem Sie die „Knopf“-Taste gedrückt haben, drehen Sie sie nach links und rechts, um das dynamische Öffnen oder Schließen auszuwählen. Wenn der dynamische Schalter aktiviert ist, werden die Tasten stärker gedrückt und die der ausgegebene Ton ist lauter. Die Standardeinstellung ist aktiviert. Kehren Sie 3 Sekunden lang ohne Bedienung zur Volumenform zurück.

13. Schlafmodus

Drücken Sie die „Knopf“-Taste und drehen Sie den „Knopf“, um den Schlafmodus auszuwählen. Drücken Sie die „Knopf“-Taste und drehen Sie den „Knopf“ nach links und rechts, um den Schlafmodus zu öffnen oder zu schließen. Nachdem der Schlafmodus aktiviert wurde, gibt es keine Aktion für zehn Minuten, und es geht in den Abschaltzustand über. Zu diesem Zeitpunkt müssen Sie den Netzschalter drücken, um neu zu starten.

14. Vibrato

Drücken Sie die [Knopf]-Taste, um das aktuelle Funktionsmenü anzuzeigen, drehen Sie die [Knopf]-Taste, um Vibrato auszuwählen, und drücken Sie dann die [Knopf]-Taste, um die Auswahl zu bestätigen. Drehen Sie die [Knopf]-Taste nach links und rechts, um die Vibrato-Funktion ein- oder auszuschalten. Drücken Sie die [Knopf]-Taste kurz, um die Funktionsänderung zu beenden. Kehren Sie für 3 Sekunden ohne weitere Bedienung zum Lautstärke-Schnittstellenmodus zurück.

15. Tempo

Drücken Sie die „Knopf“ Taste und drehen Sie die „Knopf“ Taste, um die Tempogeswindigkeit auszuwählen. Drücken Sie die „Knopf“ Taste, die Tempogeswindigkeit kann zwischen 40 und 280 gewählt werden, der Standardwert ist 120, kehren Sie 3 Sekunden lang ohne Bedienung zur Lautstärke zurück.

16. Trans

Drücken Sie die „Knopf“-Taste, drehen Sie die „Knopf“-Taste, um Transponierung auszuwählen. Drücken Sie die „Knopf“-Taste, die Transposition kann zwischen -6 und +6 ausgewählt werden, die Standardeinstellung ist 0, und kehren Sie für 3 Sekunden ohne weitere Bedienung zur Lautstärkeform zurück.

17. Mikrofonlautstärke

Drücken Sie die [Knopf]-Taste und drehen Sie die [Knopf]-Taste, um die Mikrofonlautstärke auszuwählen. Drücken Sie die [Knopf]-Taste. Drehen Sie dann den [Knopf]-Knopf nach links und rechts, um die Mikrofonlautstärke einzustellen. Die Lautstärke kann zwischen 0 und 32 gewählt werden. Die Standardlautstärke beträgt 25.

Kehren Sie 3 Sekunden lang ohne Bedienung zur Volumenform zurück.

18.LED-Anzeige

Die rote Kontrollleuchte ist die Ladeanzeige. Wenn der eingebaute Lithium-Akku nicht vollständig aufgeladen ist, schließen Sie zum Laden das 12-V-Gleichstromnetzteil an. Die rote LED-Anzeige erlischt, wenn der Akku vollständig aufgeladen ist.

19. Bluetooth- und MIDI-Funktion

Über Bluetooth können Sie eine drahtlose Verbindung zu Klavierlern-Apps auf dem iPhone oder iPad herstellen, z. B. GarageBand, Singing Bar und Perfect Piano sowie anderen professionellen Apps. Spezifische Verbindung (nehmen Sie GarageBand als Beispiel): Laden Sie die GarageBand-Software auf Ihr iPhone oder Tablet herunter. Öffnen Sie die Software, wählen Sie das Symbol „Einstellungen“ oben rechts, um in die Spalte zu gelangen, wählen Sie „Erweitert“, wählen Sie das Bluetooth-MIDI-Gerät aus, wählen Sie BLE-MIDI im Bluetooth-MIDI-Gerät, und klicken Sie auf „Verbinden“ und Sie können es normal verwenden (falls die Verbindung fehlschlägt, starten Sie bitte die elektrische Orgel neu).

(Gilt nur für die Version mit Bluetooth MIDI)

20. Bluetooth-Audiofunktion

Nach dem Booten wird die Bluetooth-Funktion automatisch eingeschaltet und es ertönt ein Hinweiston. Bluetooth ist eingeschaltet und wartet darauf, dass das verbundene Mobiltelefon Begleitung oder Musik abspielt. Das Mobiltelefon sucht nach Music-Piano, um eine Verbindung herzustellen. Nachdem die Verbindung hergestellt ist Erfolgreich, es ertönt ein Signalton, die Lautstärke wird erhöht oder verringert oder es muss eine Musikauswahl auf dem Mobiltelefon durchgeführt werden.

(Gilt nur für die Version mit Bluetooth-Audio)

Zubehör 1: Demolisten

NO	name	NO	name
000	Concerto D'Amour	030	The Blue Danube Waltz
001	Dream of Love	031	LetItGo
002	Minuet From L'Arlesienne	032	Mary had a little lamb
003	The River of Babylon	033	American patro
004	BachSong	034	MARRIAGE D' AMOUR
005	Beethoven Piano Sonatas	035	The Magic Flute-overture
006	Cancan	036	Mozart
007	Come Back To Sorrento	037	Mozart symphony.
008	Clarinet Polka	038	The Fountain
009	cuckoo waltz	039	A Comme Amour
010	Russian dance music	040	Unchained Melody
011	Merry widow waltz	041	santa lucia
012	Minuet in G	042	Troika
013	Dove	043	The Maiden's Prayer
014	OldFranc	044	Santa Claus is Coming to Town
015	Haydn serenade	045	Schubert Serenade
016	Ode to Joy	046	Ballade pour Adeline
017	Dance of the Flowers	047	Four Seasons Spring March
018	Innocent	048	Swan Lake
019	Parade March	049	Susannah
020	Gewolt	050	Turkish March
021	March Militaire	051	Smile polka
022	Triumphal March	052	my heart will go on
023	Carmen aragon	053	Pour Elise
024	Carman Overture	054	Chopin Nocturnes
025	canon	055	MINUTE WALTZ
026	Katyusha	056	Spain Matador March
027	Lovely Smurf	057	Hungarian Dance
028	Clementine sonata	058	Edelweiss
029	Croatian Rhapsody	059	Flight of the Bumble Bee

Zubehör 2: Tonlisten

NO	name	NO	name
	Piano	033	Electric Bass(finger)
000	Acoustic Grand Piano	034	Electric Bass (pick)
001	Bright Acoustic Piano	035	Fretless Bass
002	Electric Grand Piano	036	Slap Bass 1
003	Honky-tonk Piano	037	Slap Bass 2
004	Rhodes Piano	038	Synth Bass 1
005	Chorused Piano	039	Synth Bass 2
006	Harpsichord		Strings
007	Clavichord	040	Violin
	Color percussion	041	Viola
008	Celesta	042	Cello
009	Glockenspiel	043	Contrabass
010	Music box	044	Tremolo Strings
011	Vibraphone	045	Pizzicato Strings
012	Marimba	046	Orchestral Harp
013	Xylophone	047	Timpani
014	Tubular Bells		Ensemble/Chorus
015	Dulcimer	048	String Ensemble 1
	Organ	049	String Ensemble 2
016	Hammond Organ	050	Synth Strings 1
017	Percussive Organ	051	Synth Strings 2
018	Rock Organ	052	Choir Aahs
019	Church Organ	053	Voice Oohs
020	Reed Organ	054	Synth Voice
021	Accordion	055	Orchestra Hit
022	Harmonica		Copper tube
023	Tango Accordion	056	Trumpet
	Guitar	057	Trombone
024	Acoustic Guitar (nylon)	058	Tuba
025	Acoustic Guitar (steel)	059	Muted Trumpet
026	Electric Guitar (jazz)	060	French Horn
027	Electric Guitar (clean)	061	Brass Section
028	Electric Guitar (muted)	062	Synth Brass 1
029	Overdriven Guitar	063	Synth Brass 2
030	Distortion Guitar		Reed pipe
031	Guitar Harmonics	064	Soprano Sax
	Bass	065	Alto Sax
032	Acoustic Bass	066	Tenor Sax

NO	name	NO	name
067	Baritone Sax	098	FX 3 (crystal)
068	Oboe	099	FX 4 (atmosphere)
069	English Horn	100	FX 5 (brightness)
070	Bassoon	101	FX 6 (goblins)
071	Clarinet	102	FX 7 (echoes)
	Flute	103	FX 8 (sci-fi)
072	Piccolo		Folk musical instrument
073	Flute	104	Sitar
074	Recorder	105	Banjo
075	Pan Flute	106	Shamisen
076	Bottle Blow	107	Koto
077	Shakuhachi	108	Kalimba
078	Whistle	109	Bagpipe
079	Ocarina	110	Fiddle
	Synthetic tonic	111	Shanai
080	Lead 1 (square)		Percussion
081	Lead 2 (sawtooth)	112	Tinkle Bell
082	Lead 3 (caliope lead)	113	Agogo
083	Lead 4 (chiff lead)	114	Steel Drums
084	Lead 5 (charang)	115	Woodblock
085	Lead 6 (voice)	116	Taiko Drum
086	Lead 7 (fifths)	117	Melodic Tom
087	Lead 8 (bass+lead)	118	Synth Drum
	Synthetic Voice	119	Reverse Cymbal
088	Pad 1 (new age)		Sound effect
089	Pad 2 (warm)	120	Guitar Fret Noise
090	Pad 3 (polysynth)	121	Breath Noise
091	Pad 4 (choir)	122	Seashore
092	Pad 5 (bowed)	123	Bird Tweet
093	Pad 6 (metallic)	124	Telephone Ring
094	Pad 7 (halo)	125	Helicopter
095	Pad 8 (sweep)	126	Applause
	Synthetic effect	127	Gunshot
096	FX 1 (rain)	128	Drum
097	FX 2 (soundtrack)		

Zubehör 3: Rhythmuslisten

NO	name	NO	name
000	80sPop	038	Funk pop
001	16beat1	039	Rock waltz
002	8Ballad	040	Mideast
003	Soul1	041	Jazz waltz1
004	70sRock	042	Jazz waltz2
005	Afro pop	043	16Beat tune
006	Samba pop	044	Polka2
007	60sSoul	045	Waltz
008	70sSoul	046	African
009	Funky	047	Swing1
010	16Beat slide	048	Vallenato
011	Pop dance1	049	Bequine
012	Pop dance2	050	Samba1
013	Hard rock	051	Samba2
014	Fusion jazz	052	Tango1
015	Funk slide	053	Tango2
016	Aor	054	House1
017	Love ballad1	055	Jazz waltz
018	Love ballad2	056	Bolero
019	Funky soul	057	New soul
020	Classic pop	058	Bossa nova3
021	c&w1	059	Shuffle1
022	c&w2	060	Shuffle2
023	Bossa noval1	061	House2
024	Rock roll	062	Merengue1
025	Rock cha-cha	063	Salsa
026	Baiao	064	Latin swing
027	Pop dance3	065	Thailand
028	Bachata	066	Reggae1
029	Bossa noval2	067	Soul2
030	Polka1	068	Soul3
031	Blues1	069	Merengue2
032	80sSoul	070	Polka3
033	90sSoul	071	16Reggae
034	Popular waltz	072	Slow rock1
035	American march	073	Slow rock2
036	Tango	074	Slow soul3
037	Tarante	075	Jorpo

NO	name	NO	name
076	Lambada	102	Rhumba3
077	Love ballad3	103	Jazz Samba
078	Plena	104	Rhumba4
079	China1	105	Funk Samba
080	Acid	106	Rhumba5
081	8Beat modern	107	Samba3
082	Country folk	108	Hard beat
083	Soul4	109	Mambo1
084	City pop	110	Disco soul
085	Calypso	111	Mambo2
086	Love ballad4	112	Cobmo
087	Love ballad5	113	Swing beat
088	Soul5	114	China3
089	Bluegrass	115	Band marche1
090	16beat2	116	Band marche2
091	China2	117	Band marche3
092	Soul6	118	Big band1
093	Kinetic1	119	Big band2
094	Kinetic2	120	Soul7
095	Funk disco	121	Soul8
096	Cobmo disco	122	Swing2
097	Twist	123	Swing3
098	Euro beat	124	Swing4
099	Rhumba1	125	Habanera
100	Euro soul	126	Bachata1
101	Rhumba2	127	Bachata2

IV. Schutz des Digitalpianos:

1. Verwenden Sie zum Reinigen des Klaviers ein weiches und sauberes Handtuch.
2. Bewahren Sie das E-Piano nach der Benutzung ordnungsgemäß auf. Lagern Sie es nicht an einem heißen und feuchten Ort.

V. Vorsichtsmaßnahmen bei der Verwendung des E-Pianos:

Zerlegen Sie keine Teile des Digitalpianos.

Stellen Sie das Klavier nicht an einen heißen oder feuchten Ort.

Stellen Sie das E-Piano nicht an einem Ort mit starken elektrischen Wellen auf, um die Funktion des E-Pianos nicht zu beeinträchtigen.

VI. Einfache Fehlerbehebung:

- Wenn der Ton ungewöhnlich ist oder die Tasten nicht funktionieren, schalten Sie bitte das Gerät aus und starten Sie es neu, um die ursprünglichen Einstellungen wiederherzustellen.
- Wenn die Batteriespannung niedrig ist, kann es zu Problemen wie ungewöhnlichen Geräuschen und Tastaturfehlern kommen. Laden Sie die Batterie bitte rechtzeitig auf.

VII. Produktspezifikationen

1. Maße (aufgeklappt): 1260 x 245 x 70 mm, Gewicht: 5,05 kg
Maße (zusammengeklappt): 630 x 245 x 140 mm, Gewicht: 5,05 kg
2. Eingangsspannung: DC 12 V/3 A
3. Material: ABS

Vielen Dank, dass Sie sich für OYAYO entschieden haben!

Lieber Kunde,

Vielen Dank für Ihr Vertrauen und den Kauf unserer Musikinstrumente! Ihre Unterstützung ist die treibende Kraft für unser kontinuierliches Streben nach exzellenter Qualität. Wir bieten Ihnen stets ein hochwertiges Musikerlebnis mit professioneller Einstellung.

Verpflichtung zum Kundendienst

Für dieses Produkt gilt eine 1-jährige Garantie auf das gesamte Gerät (ab Kaufdatum).

Während der Garantiezeit bieten wir bei Qualitätsproblemen, die nicht auf menschliches Verschulden zurückzuführen sind, kostenlose Reparatur oder Ersatz an.

Bitte bewahren Sie den Kaufbeleg als Garantiegrundlage auf.

Kontaktieren Sie uns

Bei Problemen oder Verbesserungsvorschlägen können Sie uns gerne wie folgt kontaktieren:

Offizielle Kundendienst-E-Mail: ***support@oyayomusic.com***

Service-Antwort: Antwort innerhalb von 48 Stunden an Werktagen

Musik bewegt sich dank Ihnen. Wir freuen uns darauf, noch mehr schöne Momente mit Ihnen zu erleben!

OYAYO

Light up the Life with Music

お客様へ

このたびは弊社製品をお選びいただき、誠にありがとうございます。皆様からのご信頼とご支援に、心より感謝申し上げます。

弊社ブランドは、15年以上にわたり、電子ピアノ・電子ドラム・電子キーボードなどのポータブル電子楽器の開発・改良に取り組んでまいりました。私たちの使命は、創造性と音楽への探求心を刺激する、革新的かつ高品質なツールを提供することです。

本製品を最大限にご活用いただくために、本取扱説明書に記載の使用方法および注意事項をよくお読みのうえ、正しくお使いいただきますようお願いいたします。それにより、製品の性能を最大限に引き出し、より良い音楽体験をお楽しみいただけます。


本製品が、お客様に喜びと利便性、そして無限の音楽の可能性をもたらすことを心より願っております。ご不明な点やご質問がございましたら、いつでもお気軽に弊社カスタマーサポートまでご連絡ください。迅速かつ丁寧な対応を心がけております。



今後とも弊社製品をどうぞよろしくお願い申し上げます。
さあ、音楽の旅を始めましょう！

I. 機能概要

- ・折りたたみ式電子ピアノ
- ・61/88 標準キー（黒鍵を含む）
- ・トーン 129 トーン
- ・RHY:128 リズム
- ・デモ:60 デモ
- ・リズム機能
- ・デモ機能
- ・メトロノーム機能
- ・ノブボタン機能
- ・10W デュアルステレオスピーカー
- ・スリープ機能
- ・コード機能
- ・デュアルキーボード機能
- ・ダイナミック機能
- ・LCD ディスプレイ
- ・サスティンペダル
- ・Bluetooth MIDI/Bluetooth オーディオ機能
- ・電源：1. 内蔵リチウム電池 7.4V/1800mAh
2. 外部 DC 12V/3A

II. 機能ボタンの説明:

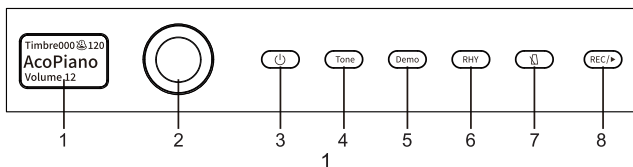

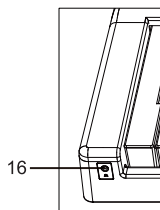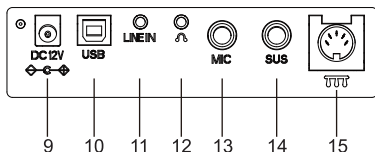

1		LCDディスプレイ	9		DC 12V/3A 充電ポート
2		ノブボタン	10		USB-Bポート
3		電源ボタン	11		オーディオ入力端子
4	Tone	音色ボタン	12		リアヘッドホン端子
5	Demo	デモソングボタン	13		マイク入力端子
6	RHY	リズムボタン	14		サステイン／ペダル端子
7		メトロノームボタン	15		3ペダル端子
8	REC/▶	録音／再生ボタン	16		フロントヘッドホン端子

III. 製品機能の説明:

1. 電源ボタン

このボタンを約0.5秒長押しすると電源が入ります。もう一度押すと電源が切れます。

2. ノブ ボタン (音量調整)

1. 電源投入時のデフォルトは音量調整モードです。左右に回して音量レベルを選択します。
2. 音量は 0 ～ 15 レベルから選択できます。デフォルトは 12 レベルです。
3. 「ノブ」ボタンを押してメニューに入り、「ノブ」ボタンを左右に回して選択機能に入ります。最初に押してメニュー設定に入り、もう一度押して機能確認に入ります。0.5 秒間押すと上部のメニューに戻ります。3 秒間何も操作せずに

音量型に戻ります。

4. 音量型の下で、「ノブ」ボタンを 2 秒間押すと、システムがデフォルト状態に戻ります。

3. 音色ボタン

129種類の音色が内蔵されています。「Tone」を押すと、ディスプレイに「Timbre000」と表示されます。「ノブ」を左右に回して音色を選択できます。3秒間操作がない場合、自動的に音量モードに戻ります。

4. リズムボタン

128種類のリズムが搭載されています。「RHY」ボタンを押すと自動的にリズムが再生され、画面には「Rhythm000」と表示されます。ノブを左右に回してリズムを選択し、再度RHYボタンを押すと停止します。3秒間操作がない場合、音量モードに戻ります。

5. メトロノームボタン

「」ボタンを押すとメトロノームが再生されます。「ノブ」を左右に回してテンポを調整できます。「」再度ボタンを押すと停止します。3秒間操作がない場合、音量モードに戻ります。

6. デモボタン

60 種類のデモの場合、「Demo」ボタンを押すと再生します。「ノブ」を左右に回してデモを選択し、もう一度押すと停止します。「Demo」で停止し、3秒間何も操作しないと音量モードに戻ります

注: 「Demo」を長押しすると、リバーブ効果をオンまたはオフにできます

7. サステイン

1. 「ノブ」ボタンを押し、回転させてサステイン機能を選択します。
2. 「ノブ」ボタンを押し、左右に回してサステインオープンまたはドーズ量を選択します。サステインをオンにすると、演奏中にメロディーにサステイン効果がかかります。 3秒間何も操作しないとボリュームインターフェースモードに戻ります。

8. デュアルキーボード

「ノブ」ボタンを押し、「ノブ」ボタンを回してスプリットキーを選択します。
「ノブ」ボタンを押し、「ノブ」を左右に回してデュアルキーボードの開閉を選択します。デュアルキーボードは左右3オクターブ同じピッチになります。3秒間何も操作せずにボリュームモードに戻ります。



9. ダブルボイス

「ノブ」ボタンを押し、「ノブ」ボタンを回してダブルボイスを選択します。
「ノブ」ボタンを押し、「ノブ」ボタンを左右に回すとダブルボイスのオープンまたはクローズを選択できます。3秒間何も操作しないとボリュームインターフェースモードに戻ります。

10. コードボタン

「Chord」ボタンを押すと、コード機能を開いたり閉じたりできます。

11. REC/▶ ボタン

「REC/▶」を3秒間押しして録音します。画面に「Record ON」と表示され、もう一度押すと録音を停止します。画面に「Record OFF」と表示され、もう一度押すと録音した内容を再生できます。画面に「Playback ON」と表示され、もう一度押すと停止します。画面に「Playback OFF」と表示されます。

12. ダイナミック

「ノブ」ボタンを押し、「ノブ」を回してダイナミックを選択し、「ノブ」ボタンを押した後、左右に回してダイナミック開閉を選択します。ダイナミックスイッチがオンに選択されると、キーがより強く押され、再生される音がより大きく

なります。デフォルトはオンです。3 秒間何も操作せずにボリュームモードに戻ります。

13. スリープモード

「ノブ」ボタンを押し、「ノブ」を回してスリープモードを選択します。
「ノブ」ボタンを押し、「ノブ」を左右に回してスリープモードの開閉を選択します。スリープモードをオンにすると、10分間何も操作がないとシャットダウン状態になります。このとき、電源ボタンを押して再起動する必要があります。

14. ビブラート

[ノブ] ボタンを押して現在の機能メニューを表示し、[ノブ] ボタンを回してビブラートを選択し、[ノブ] ボタンを押して選択を確定し、[ノブ] ボタンを左右に回してビブラート機能をオンまたはオフにし、[ノブ] ボタンを短く押すと機能変更を終了します。3 秒間何も操作しないとボリューム インターフェイス モードに戻ります。

15. テンポ

「ノブ」ボタンを押し、「ノブ」ボタンを回してテンポ速度を選択します。「ノブ」ボタンを押すと、テンポ速度は 40 から 280 まで選択できます。デフォルトは 120 です。3 秒間何も操作しないとボリューム モードに戻ります。

16. トランス

「ノブ」ボタンを押し、「ノブ」ボタンを回してトランスポーズを選択します。「ノブ」ボタンを押すと、トランスポジションは -6 から +6 まで選択できます。デフォルトは 0 です。3 秒間何も操作せずに音量調整画面に戻ります。

17. マイク音量

[ノブ] ボタンを押し、[ノブ] ボタンを回してマイク音量を選択します。[ノブ] ボタンを押し、[ノブ] ボタンを左右に回してマイクの音量を調整します。音量は 0 から 32 まで選択できます。デフォルトの音量は 25 です。3 秒間何も操作せずに音量調整画面に戻ります。

18. LED インジケータ

赤色のインジケータ ライトは充電インジケータです。内蔵リチウム バッテリーが完全に充電されていない場合は、DC 12V 電源を接続して充電してください。バッテリーが完全に充電されると、赤色の LED インジケータ ライトは消灯します。

19. Bluetooth MIDI機能

Bluetoothを介して、iPhoneまたはiPadのGarageBand、Singing Bar、Perfect Pianoなどのピアノ学習アプリやその他の専門アプリにワイヤレスで接続できます。具体的な接続（GarageBandを例に挙げます）； iPhoneまたはタブレットにGarageBandソフトウェアをダウンロードし、ソフトウェアを開いて、右上の「設定」アイコンを選択して列に入り、「詳細」を選択し、Bluetooth MIDIデバイスを選択し、Bluetooth MIDIデバイスでBLE-MIDIを選択して接続をクリックすると、通常どおり使用できます（接続に失敗した場合は、電子オルガンを再起動してください）

（Bluetooth MIDIバージョンにのみ適用されます）

20. Bluetoothオーディオ機能

起動後、Bluetooth機能が自動的にオンになり、プロンプトトーンが鳴ります。Bluetoothがオンになり、接続された携帯電話が伴奏または音楽を再生するのを待機します。携帯電話は接続するMusic-Pianoを検索します。接続が成功すると、プロンプトトーンが鳴ります。音量の上げ下げや音楽の選択は携帯電話で行う必要があります。

（Bluetooth オーディオ付きバージョンのみ）

付属品1:デモリスト

NO	name	NO	name
000	Concerto D'Amour	030	The Blue Danube Waltz
001	Dream of Love	031	LetItGo
002	Minuet From L'Arlesienne	032	Mary had a little lamb
003	The River of Babylon	033	American patro
004	BachSong	034	MARIAGE D' AMOUR
005	Beethoven Piano Sonatas	035	The Magic Flute-overture
006	Cancan	036	Mozart
007	Come Back To Sorrento	037	Mozart symphony.
008	Clarinet Polka	038	The Fountain
009	cuckoo waltz	039	A Comme Amour
010	Russian dance music	040	Unchained Melody
011	Merry widow waltz	041	santa lucia
012	Minuet in G	042	Troika
013	Dove	043	The Maiden's Prayer
014	OldFranc	044	Santa Claus is Coming to Town
015	Haydn serenade	045	Schubert Serenade
016	Ode to Joy	046	Ballade pour Adeline
017	Dance of the Flowers	047	Four Seasons Spring March
018	Innocent	048	Swan Lake
019	Parade March	049	Susannah
020	Gewolt	050	Turkish March
021	March Militaire	051	Smile polka
022	Triumphal March	052	my heart will go on
023	Carmen aragon	053	Pour Elise
024	Carman Overture	054	Chopin Nocturnes
025	canon	055	MINUTE WALTZ
026	Katyusha	056	Spain Matador March
027	Lovely Smurf	057	Hungarian Dance
028	Clementine sonata	058	Edelweiss
029	Croatian Rhapsody	059	Flight of the Bumble Bee

付属品2:トーンリスト

NO	name	NO	name
	Piano	033	Electric Bass(finger)
000	Acoustic Grand Piano	034	Electric Bass (pick)
001	Bright Acoustic Piano	035	Fretless Bass
002	Electric Grand Piano	036	Slap Bass 1
003	Honky-tonk Piano	037	Slap Bass 2
004	Rhodes Piano	038	Synth Bass 1
005	Chorused Piano	039	Synth Bass 2
006	Harpsichord		Strings
007	Clavichord	040	Violin
	Color percussion	041	Viola
008	Celesta	042	Cello
009	Glockenspiel	043	Contrabass
010	Music box	044	Tremolo Strings
011	Vibraphone	045	Pizzicato Strings
012	Marimba	046	Orchestral Harp
013	Xylophone	047	Timpani
014	Tubular Bells		Ensemble/Chorus
015	Dulcimer	048	String Ensemble 1
	Organ	049	String Ensemble 2
016	Hammond Organ	050	Synth Strings 1
017	Percussive Organ	051	Synth Strings 2
018	Rock Organ	052	Choir Aahs
019	Church Organ	053	Voice Oohs
020	Reed Organ	054	Synth Voice
021	Accordion	055	Orchestra Hit
022	Harmonica		Copper tube
023	Tango Accordion	056	Trumpet
	Guitar	057	Trombone
024	Acoustic Guitar (nylon)	058	Tuba
025	Acoustic Guitar (steel)	059	Muted Trumpet
026	Electric Guitar (jazz)	060	French Horn
027	Electric Guitar (clean)	061	Brass Section
028	Electric Guitar (muted)	062	Synth Brass 1
029	Overdriven Guitar	063	Synth Brass 2
030	Distortion Guitar		Reed pipe
031	Guitar Harmonics	064	Soprano Sax
	Bass	065	Alto Sax
032	Acoustic Bass	066	Tenor Sax

NO	name	NO	name
067	Baritone Sax	098	FX 3 (crystal)
068	Oboe	099	FX 4 (atmosphere)
069	English Horn	100	FX 5 (brightness)
070	Bassoon	101	FX 6 (goblins)
071	Clarinet	102	FX 7 (echoes)
	Flute	103	FX 8 (sci-fi)
072	Piccolo		Folk musical instrument
073	Flute	104	Sitar
074	Recorder	105	Banjo
075	Pan Flute	106	Shamisen
076	Bottle Blow	107	Koto
077	Shakuhachi	108	Kalimba
078	Whistle	109	Bagpipe
079	Ocarina	110	Fiddle
	Synthetic tonic	111	Shanai
080	Lead 1 (square)		Percussion
081	Lead 2 (sawtooth)	112	Tinkle Bell
082	Lead 3 (caliope lead)	113	Agogo
083	Lead 4 (chiff lead)	114	Steel Drums
084	Lead 5 (charang)	115	Woodblock
085	Lead 6 (voice)	116	Taiko Drum
086	Lead 7 (fifths)	117	Melodic Tom
087	Lead 8 (bass+lead)	118	Synth Drum
	Synthetic Voice	119	Reverse Cymbal
088	Pad 1 (new age)		Sound effect
089	Pad 2 (warm)	120	Guitar Fret Noise
090	Pad 3 (polysynth)	121	Breath Noise
091	Pad 4 (choir)	122	Seashore
092	Pad 5 (bowed)	123	Bird Tweet
093	Pad 6 (metallic)	124	Telephone Ring
094	Pad 7 (halo)	125	Helicopter
095	Pad 8 (sweep)	126	Applause
	Synthetic effect	127	Gunshot
096	FX 1 (rain)	128	Drum
097	FX 2 (soundtrack)		

付属品3:リズムリスト

NO	name	NO	name
000	80sPop	038	Funk pop
001	16beat1	039	Rock waltz
002	8Ballad	040	Mideast
003	Soul1	041	Jazz waltz1
004	70sRock	042	Jazz waltz2
005	Afro pop	043	16Beat tune
006	Samba pop	044	Polka2
007	60sSoul	045	Waltz
008	70sSoul	046	African
009	Funky	047	Swing1
010	16Beat slide	048	Vallenato
011	Pop dance1	049	Bequine
012	Pop dance2	050	Samba1
013	Hard rock	051	Samba2
014	Fusion jazz	052	Tango1
015	Funk slide	053	Tango2
016	Aor	054	House1
017	Love ballad1	055	Jazz waltz
018	Love ballad2	056	Bolero
019	Funky soul	057	New soul
020	Classic pop	058	Bossa nova3
021	c&w1	059	Shuffle1
022	c&w2	060	Shuffle2
023	Bossa noval1	061	House2
024	Rock roll	062	Merengue1
025	Rock cha-cha	063	Salsa
026	Baiao	064	Latin swing
027	Pop dance3	065	Thailand
028	Bachata	066	Reggae1
029	Bossa noval2	067	Soul2
030	Polka1	068	Soul3
031	Blues1	069	Merengue2
032	80sSoul	070	Polka3
033	90sSoul	071	16Reggae
034	Popular waltz	072	Slow rock1
035	American march	073	Slow rock2
036	Tango	074	Slow soul3
037	Tarante	075	Jorpo

NO	name	NO	name
076	Lambada	102	Rhumba3
077	Love ballad3	103	Jazz Samba
078	Plena	104	Rhumba4
079	China1	105	Funk Samba
080	Acid	106	Rhumba5
081	8Beat modern	107	Samba3
082	Country folk	108	Hard beat
083	Soul4	109	Mambo1
084	City pop	110	Disco soul
085	Calypso	111	Mambo2
086	Love ballad4	112	Cobmo
087	Love ballad5	113	Swing beat
088	Soul5	114	China3
089	Bluegrass	115	Band marche1
090	16beat2	116	Band marche2
091	China2	117	Band marche3
092	Soul6	118	Big band1
093	Kinetic1	119	Big band2
094	Kinetic2	120	Soul7
095	Funk disco	121	Soul8
096	Cobmo disco	122	Swing2
097	Twist	123	Swing3
098	Euro beat	124	Swing4
099	Rhumba1	125	Habanera
100	Euro soul	126	Bachata1
101	Rhumba2	127	Bachata2

IV、電子ピアノの保護:

柔らかく清潔なタオルで電子ピアノを拭いてください。

使用後は電子ピアノを適切に保管し、高温多湿の場所に置かないでください。

V、電子ピアノ使用時の注意事項:

電子ピアノのいかなる部分も分解しないでください。

電子ピアノを高温や湿気の多い場所に置かないでください。

強い電波が発生する場所に電子ピアノを置かないでください。これにより、電子ピアノの機能に影響が出る可能性があります。

VI、簡単な故障の解決方法:

音が異常であったり、鍵盤が反応しない場合は、再度電源を入れ直し、元の設定に戻してください。

バッテリーの電圧が低い場合も音の異常や鍵盤の反応不良などの問題が発生することがありますので、早めに充電してください。

VII. 製品仕様

1. 製品サイズ（展開時）：1260*245*70mm、重量：5.05kg
製品サイズ（折りたたみ時）：630*245*140mm、重量：5.05kg
2. 入力電圧：DC 12V/3A
3. 材質：ABS

OYAYOをお選びいただきありがとうございます。

お客様へ：

この度は当社の楽器をお選びいただき、心より感謝申し上げます。お客様のご支援は、当社が優れた品質を追求し続けるための大きな力となっております。これからもプロフェッショナルな姿勢で、高品質な音楽体験をお届けいたします。

アフターサービスについて

本製品には、全体的に1年間の保証サービスが提供されます（受領日から計算）。

。保証期間内に人為的要因以外で製品に問題が発生した場合、無料で修理または交換サービスを提供いたします。

保証を受けるために、購入領収書の保管をお願い申し上げます。

お問い合わせ

使用中に問題が発生したり、改善のご提案がある場合は、以下の方法でお気軽にお問い合わせください：

公式アフターサービスメール：***support@oyayomusic.com***

サービス対応：営業日内に48時間以内に返信いたします。

音楽はあなたのおかげで動きます。あなたと共に、さらに素晴らしい瞬間を創り出すことを楽しみにしております！

OYAYO

Light up the Life with Music