



**Roll Up Piano
User Manual
Roll-Up-Piano
Benutzerhandbuch
ロールアップピアノ
取扱説明書**

Light up the Life with Music

Dear Customer,

Thank you for choosing our product! We are deeply honored by your trust and support. For over 15 years, our brand has been dedicated to designing and refining portable electronic musical instruments, including electronic pianos, electronic drums, electronic keyboards, and more. Our mission is to deliver innovative, high-quality tools that inspire creativity and musical exploration. To ensure the best use of your instrument, we strongly recommend that you carefully read and follow the instructions and precautions outlined in this manual. This will help you to fully utilize the potential of your equipment while safeguarding your experience.



We sincerely hope this product brings you joy, convenience, and endless musical possibilities. Should you have any questions, concerns, or feedback, please do not hesitate to contact our customer service team. We are committed to providing prompt and professional support to enhance your journey with us.

Thank you once again for being part of our story. Let the music begin!

I. Product function introduction:

- 61/88standard keys (includes black key)
- Full fingered function
- LED digital display screen
- Teaching mode
- Tone:128 tones
- Vibrato/Sustain/Trans function
- RHY:128rhythms
- USB-MIDI OUT
- Demo:15 demos
- Sustain pedal
- Demo function
- MIDI function
- Metronome function
- Record/Play function
- Power supply:1.built-in battery 3.7V/1100mAh supply
2.USB 5V/1A supply

II. Function button description:

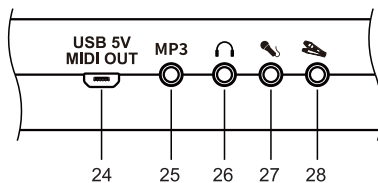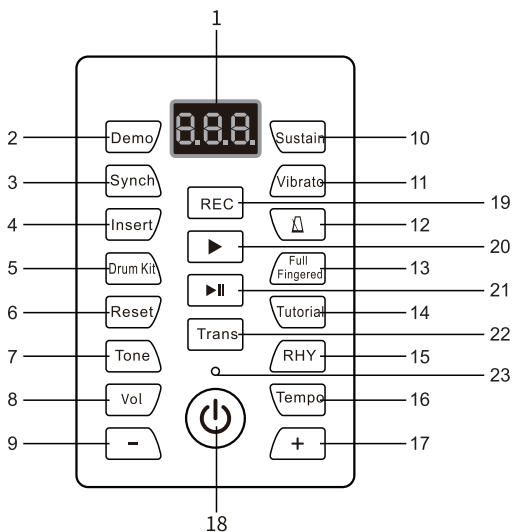

1		LED digital display screen	15	RHY	Rhythm button
2	Demo	Demo button	16	Tempo	Tempo button
3	Synch	Synchronize button	17	+	Increase button
4	Insert	Insert button	18		ON/OFF
5	Drum kit	Drum kit button	19	REC	Record button
6	Reset	Reset button	20		Play button
7	Tone	Tone button	21		Start/Stop button
8	Vol	Volume button	22	Trans	Trans button
9	-	Decrease button	23		LED indicator
10	Sustain	Sustain button	24		USB 5V interface
11	Vibrato	Vibrato button	25		MP3 interface
12		Metronome button	26		Earphone interface
13	Full fingered	Full fingered button	27		MIC interface
14	Tutorial	Teaching button	28		Pedal interface

III. Product function description:

1. Tone

- 128 tones.
- The tone is directly selected when it is turned on, the default value is 000, press "+" or "-" to select the tone.
- In other function selection mode, press the tone button on the panel to return to the tone selection mode.

2. Volume

- Press the "Volume" button, repress "+" or "-" to increase or decrease the sound, the digital tube displays the corresponding volume level.
- The default is 12 level when turn on, and the biggest is 15 level.

3. RHY

- 128 rhythms
- Press "Start/Stop" button or "RHY" button, to enter RHY playing mode, repress "Start/Stop" button to stop playing.
- Press "+" or "-" to select RYH.
- Press "Synchronize" button, repress any keys to play RHY.
- Press "Insert" button, can insert a new rhythm on the basis of the original rhythm.

4. Demo

- 15 demos
- Press "Demo" button, the system plays all demo songs, press "Start/Stop" button to stop playing.
- Press "+" or "-" button to select the demo.

5. Full fingered

- When playing the rhythm, press "Full fingered" button to enter the finger and full fingered chord mode.
- Chord function: Bass zone, 61 keys (from C-# interval total 19 keys), 88 keys (From A2-# interval total 34 keys), play chords that match the rhythm, and the chord's pitch changes with the pitch of the keys.
- Under chord mode, press "Full fingered" button to close the chord.

6. Record function

- Press "Record" button to enter record mode, Digital tube displays REC.
- The recording function is to use multichannel| real-time recording to record notes.
- After entering the record mode, the user can play any keys, the system will automatically record the notes played by the user. When the record block planned by the system is full, the digital tube will display FULL to indicate that the record is full.
- Press "Play" button to play what you record, but only when a note is recorded can this playback function be considered valid. After playback is over, it will automatically return to the original state.
- During the playback process, you can choose to play back the tone, and then record again. After the system is reset, the recorded notes will be automatically refreshed.

7. Trans function

- Total will be 13 levels,-6,-5,-4,-3,-2,-1,0,1,2,3,4,5,6.
- In playing mode, press "Trans" button to enter trans function, select by "+" or "-".

8. Tempo function

- In performance mode, press "Tempo"button to enter the playback adjustment function, to control the playback speed by "+" or "-".

9.USB MIDI-IN-OUT function

- Connect to a computer or tablet via USB for multimedia interaction

10. Metronome function

- Metronome auxiliary function, Press"Metronome" button to cycle through the selection of beats, there are four variations of the metronome. Will beat1/4 beat-2/4 beat-3/4 beat-4/4 beat.

11. Keyboard drum function

- Press"Drum kit"button to change the drum kit tone directly.

12. Sustain/Vibrato function

- Press"Sustain""Vibrato "button to open or close sustain or vibrato function.

13. Pedal function

- Step on the sustain pedal has sustained function.

14. Sleeping function

- During use, if there is no action for three minute, the digital tube light and indicator light will be off, the system will automatically enter the sleep state, press any key to wake it up.

15.LED indicator

- The red LED light is the power working indicator,red/green double LED is the charging indicator, when the built-in lithium battery is not fully charged, plug in the USB 5V power supply to charge it. Red LED indicator is on, when the battery is fully charged, turns to green-light.

16. Reset function

- Press the reset button to restore the product to the product preset state.

Accessory one: lists of demo

NO	name	NO	name
000	By Alice	008	Les premiers sourires de Vanessa
001	Croatian Rhapsody	009	Snowdreams
002	A comme amour	010	Bandari
003	Green Sleeves	011	Castle in the Sky
004	Dream Wedding	012	Song of Joy
005	Romance De Amor	013	Edelweiss
006	Dancing Girl	014	Dance of fireflie
007	CrystlLake	015	

Accessory two: lists of tone

NO	name	NO	name
	Piano	022	Harmonica
000	Piano 1	023	Bandoneon
001	Piano 2		Guitar
002	Piano 3	024	Acoustic Guitar (nylon)
003	Honky-Tonk Piano	025	Acoustic Guitar(steel)
004	Rhodes Piano	026	Electric Guitar (jazz)
005	Chorused Piano	027	Electric Guitar (clean)
006	Harpsichord	028	Electric Guitar (muted)
007	Clavinet	029	Overdriven Guitar
	Percussion	030	Distortion Guitar
008	Celesta	031	Guitar Harmonics
009	Glockenspiel		Bass
010	Music Box	032	Acoustic Bass
011	Vibraphone	033	Electric Bass(finger)
012	Marimba	034	Electric Bass(pick)
013	Xylophone	035	Fretless Bass
014	Tubular Bells	036	Slap Bass 1
015	Santur	037	Slap Bass 2
	Organ	038	Synth Bass 1
016	Hammond Organ	039	Synth Bass 2
017	Percussive Organ		String Solo
018	Rock Organ	040	Violin
019	Church Organ	041	Viola
020	Reed Organ	042	Cello
021	Accordion	043	Contrabass

NO	name	NO	name
044	Tremolo Strings	078	Whistle
045	Pizzicato Strings	079	Ocarina
046	Orchestral Harp		Synthetic tonic
047	Timpani	080	Lead 1 (square)
	Chorus	081	Lead 2 (sawtooth)
048	String Ensemble 1	082	Lead 3 (calliope lead)
049	String Ensemble 2	083	Lead 4 (chiff lead)
050	SynthStrings 1	084	Lead 5 (charang)
051	SynthStrings 2	085	Lead 6 (voice)
052	Choir Aahs	086	Lead 7 (fifths)
053	Voice Oohs	087	Lead 8 (bass+lead)
054	Synth Voice		Synthetic soft tone
055	Orchestra Hit	088	Pad 1 (new age)
	Brass instrument	089	Pad 2 (warm)
056	Trumpet	090	Pad 3 (polysynth)
057	Trombone	091	Pad 4 (choir)
058	Tuba	092	Pad 5 (bowed)
059	Muted Trumpet	093	Pad 6 (metallic)
060	French Horn	094	Pad 7 (halo)
061	Brass Section	095	Pad 8 (sweep)
062	Synth Brass 1		Synthetic effects
063	Synth Brass 2	096	FX 1 (rain)
	Reed instrument	097	FX 2 (soundtrack)
064	Soprano Sax	098	FX 3 (crystal)
065	Alto Sax	099	FX 4 (atmosphere)
066	Tenor Sax	100	FX 5 (brightness)
067	Baritone Sax	101	FX 6 (goblins)
068	Oboe	102	FX 7 (echoes)
069	English Horn	103	FX 8 (sci-fi)
070	Bassoon		Tribal instrument
071	Clarinet	104	Sitar
	Wind instrument	105	Banjo
072	Piccolo	106	Shamisen
073	Flute	107	Koto
074	Recorder	108	alimba
075	Pan Flute	109	Bagpipe
076	Bottle Blow	110	Fiddle
077	Skakuhachi	111	Shanai

NO	name	NO	name
	Percussion		Sound effects
112	Tinkle Bell	120	Guitar Fret Noise
113	Agogo	121	Breath Noise
114	Steel Drums	122	Seashore
115	Woodblock	123	Bird Tweet
116	Taiko Drum	124	Telephone Ring
117	Melodic Tom	125	Helicopter
118	Synth Drum	126	Applause
119	Reverse Cymbal	127	Gun shot

Accessory three: lists of rhythm

NO	name	NO	name
000	Beguines Wing	026	Char
001	Beguine_2	027	Samba_1
002	Beguine_3	028	Samba_2
003	Pop hit	029	Ubminimal
004	Pop	030	8Bit_1
005	Pop Malay	031	8Bit_2
006	Bossa nova	032	16Bit_1
007	Disco_1	033	16bit_2
008	Disco_2	034	Ballad_16T
009	Blue grass disco	035	Country_16T
010	Waltz_1	036	Tango_1
011	Waltz_2	037	Tango_2
012	True ballad waltz	038	Polka_1
013	Bossa Waltz	039	Polka_2
014	Easy Waltz	040	Pop Swing
015	Shuffle Waltz	041	Easy Swing
016	Reggae Waltz	042	Soft Swing
017	Rumba Waltz	043	Rock_1
018	March_1	044	Rock_2
019	March_2	045	Rock_3
020	Rumba_1	046	Airy Rock
021	Rumba_2	047	Heart Rock
022	Slow_1	048	Rock & Roll
023	Slow_2	049	Urban Rock
024	Disco cha cha	050	Ballad
025	Guala cha	051	Jazz Ballad

NO	name	NO	name
052	C.Ballad	090	Square Beat
053	J.Ballad	091	Euro Beat
054	60s Slow Ballad	092	Alpha Dance
055	Piano Ballad	093	Beta Dance
056	50s Ballad	094	Dream Dance
057	Snake Base	095	Dance_1
058	Happy Blues	096	Dance_2
059	Old Blues	097	Dance_3
060	Blue Gras	098	RAP
061	Boodie_1	099	The Country
062	Boodie_2	100	Country Shuffle
063	Boodie_3	101	Electric Keys
064	Shuffle_1	102	Dark Keys
065	Shuffle_2	103	Easy Walk
066	Dream Shuffle	104	Destiny
067	Country Shuffle	105	Comedy
068	Quick Shuffle	106	Drive
069	Reggae Shuffle	107	Liquid Nova
070	R&B	108	Indonesian folk
071	Reggae_1	109	Absolute Music
072	Reggae_2	110	Jamaica
073	Reggae_3	111	Synthesis
074	Salsa_1	112	Feel
075	Salsa_2	113	Accelerate
076	Salsa_3	114	Beach Night
077	Tecno_1	115	Irish
078	Tecno_2	116	Tarantella
079	Funky_1	117	Big band
080	Funky_2	118	Dan
081	Dixie_1	119	Fusion
082	Dixie_2	120	Horse
083	Foxtrot_1	121	Canon
084	Foxtrot_2	122	Latin
085	R.roll_1	123	Mambo
086	R.roll_2	124	New age
087	Fast Beat	125	Slow rc
088	Quick Beat	126	Soul
089	Smooth Beat	127	Twist

IV. Protection of roll up piano:

1. The roll up piano can be cleaned with a clean soft towel.
2. The roll up piano should be properly rolled up and stored after use.
3. Do not put it in a hot or humid place.

V. Precautions for using roll up piano:

- Place it flat when using, do not use on uneven places, do not move around during use, otherwise it will affect or impair the function.
- Do not roll it too tightly after using, so as not to damage the normal function of the keys or shorten the service life.
- Do not pull or twist the keys.
- Do not put it in a hot or humid place.
- Do not put it in a hot or humid place.
- Do not put it in a place with strong electric waves, so as not to affect the function.

VI. Simple troubleshooting:

If the sound is abnormal or the keys fail, please turn off the power and restart the machine to restore the original settings.

Thank you for choosing OYAYO!

Dear Customer:

Thanks for your trust and purchase of our musical instruments! Your support is the driving force for our continuous pursuit of excellent quality. We will always provide you with a high-quality music experience with a professional attitude.

After-sales Service Commitment

This product enjoys a 1-year warranty service for the whole machine (calculated from the date of receipt)

During the warranty period, if there are product quality problems caused by non-human factors, we will provide free repair or replacement services

Please keep the purchase receipt as the basis for warranty

Contact us

If you encounter any problems during use or have suggestions for improvement, please feel free to contact us through the following methods:

Official after-sales email: support@oyayomusic.com

Service response: reply within 48 hours on working days

Music is moving because of you, looking forward to creating more wonderful moments with you!

OYAYO

Light up the Life with Music

Sehr geehrte Kundin, sehr geehrter Kunde,
Vielen Dank, dass Sie sich für unser Produkt entschieden haben! Wir freuen uns sehr über Ihr Vertrauen und Ihre Unterstützung. Seit über 15 Jahren entwickelt und verfeinert unsere Marke tragbare elektronische Musikinstrumente, darunter E-Pianos, E-Drums, E-Keyboards und mehr. Unsere Mission ist es, innovative, hochwertige Instrumente zu entwickeln, die Kreativität und musikalische Entdeckungen inspirieren.

Um Ihr Instrument optimal nutzen zu können, empfehlen wir Ihnen dringend, die Anweisungen und Vorsichtsmaßnahmen in dieser Anleitung sorgfältig zu lesen und zu befolgen. So können Sie das Potenzial Ihres Instruments voll ausschöpfen und gleichzeitig Ihr Erlebnis schützen.



Wir hoffen aufrichtig, dass Ihnen dieses Produkt Freude, Komfort und endlose musikalische Möglichkeiten bietet. Bei Fragen, Anliegen oder Feedback wenden Sie sich bitte an unseren Kundenservice. Wir sind bestrebt, Ihnen schnell und professionell zu helfen, um Ihre Erfahrung mit uns zu verbessern.

Nochmals vielen Dank, dass Sie Teil unserer Geschichte sind. Lasst die Musik beginnen!

I. Produktfunktionen:

- 61/88 Standardtasten
(inkl. schwarzer Taste)
- Fingerfunktion
- LED-Digitalanzeige
- Teaching-Modus
- Klangfarben: 128 Töne
- Vibrato/Sustain/Trans-Funktion
- RHY: 128 Rhythmen
- USB-MIDI-Ausgang
- Demo: 15 Demos
- Sustain-Pedal
- Demo-Funktion
- MIDI-Funktion
- Metronom-Funktion
- Aufnahme-/Wiedergabe-Funktion
- Stromversorgung:
 1. Eingebauter Akku (3,7 V/1100 mAh)
 2. USB-Anschluss (5 V/1 A)

II. Beschreibung der Funktionstasten:

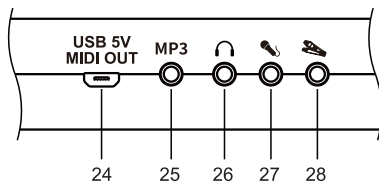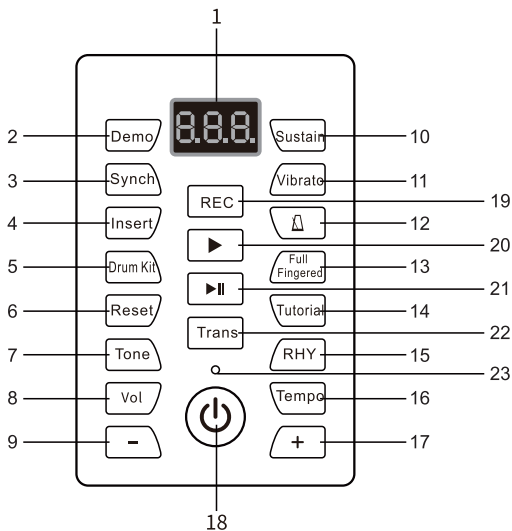

1		LED digital display screen	15	RHY	Rhythm button
2	Demo	Demo button	16	Tempo	Tempo button
3	Synch	Synchronize button	17	+	Increase button
4	Insert	Insert button	18		ON/OFF
5	Drum kit	Drum kit button	19	REC	Record button
6	Reset	Reset button	20		Play button
7	Tone	Tone button	21		Start/Stop button
8	Vol	Volume button	22	Trans	Trans button
9	-	Decrease button	23		LED indicator
10	Sustain	Sustain button	24		USB 5V interface
11	Vibrato	Vibrato button	25		MP3 interface
12		Metronome button	26		Earphone interface
13	Full fingered	Full fingered button	27		MIC interface
14	Tutorial	Teaching button	28		Pedal interface

III. Produktfunktionsbeschreibung:

1. Klangfarbe

- 128 Klangfarben.
- Die Klangfarbe wird direkt nach dem Einschalten ausgewählt. Der Standardwert ist 000. Drücken Sie „+“ oder „-“, um die Klangfarbe auszuwählen.
- Im anderen Funktionsauswahlmodus drücken Sie die Klangfarbentaste auf dem Bedienfeld, um zum Klanguauswahlmodus zurückzukehren.

2. Lautstärke

- Drücken Sie die „Volume“ Taste und drücken Sie „+“ oder „-“, um die Lautstärke zu erhöhen oder zu verringern. Die digitale Anzeige zeigt die entsprechende Lautstärke an.
- Die Standardeinstellung ist 12 Stufen beim Einschalten, die höchste Stufe ist 15 Stufen.

3. RHY

- 128 Rhythmen
- Drücken Sie die „Start/Stop“- oder „RHY“-Taste, um in den RHY-Wiedergabemodus zu wechseln. Drücken Sie die „Start/Stop“-Taste erneut, um die Wiedergabe zu stoppen.
- Drücken Sie „+“ oder „-“, um RYH auszuwählen.
- Drücken Sie die „Synchronize“-Taste und drücken Sie eine beliebige Taste erneut, um RHY abzuspielen.
- Mit der Schaltfläche „Insert“ können Sie einen neuen Rhythmus basierend auf dem Originalrhythmus einfügen.

4. Demo

- 15 Demos
- Mit der Schaltfläche „Demo“ werden alle Demos abgespielt. Mit der Schaltfläche „Start/Stop“ stoppen Sie die Wiedergabe.
- Mit den Tasten „+“ oder „-“ wählen Sie die Demo aus.

5. Full fingered

- Drücken Sie während der Rhythmuswiedergabe die Taste „Full fingered“, um in den Akkordmodus für Finger- und Vollgriffe zu wechseln.
- Akkordfunktion: Bassbereich, 61 Tasten (vom C-fis-Intervall insgesamt 19 Tasten), 88 Tasten (vom A2-fis-Intervall insgesamt 34 Tasten). Spielen Sie Akkorde passend zum Rhythmus. Die Tonhöhe des Akkords ändert sich mit der Tonhöhe der Tasten.
- Drücken Sie im Akkordmodus die Taste „Full fingered“, um den Akkord zu schließen.

6. Aufnahmefunktion

- Drücken Sie die Taste „Record“, um in den Aufnahmemodus zu wechseln. Die Digitalanzeige zeigt „REC“ an.
- Die Aufnahmefunktion nutzt Mehrkanal-Echtzeitaufzeichnung zur Aufnahme von Noten.
- Im Aufnahmemodus können Sie beliebige Tasten spielen. Das System zeichnet die gespielten Noten automatisch auf. Wenn der vom System vorgesehene Aufnahmeblock voll ist, zeigt die Digitalanzeige „FULL“ an.
- Drücken Sie die Taste „Play“, um Ihre Aufnahme abzuspielen. Diese

Wiedergabefunktion ist jedoch nur gültig, wenn eine Note aufgenommen wurde. Nach der Wiedergabe wird automatisch der ursprüngliche Zustand wiederhergestellt.

- Während der Wiedergabe können Sie den Ton wiedergeben und anschließend erneut aufnehmen. Nach dem Zurücksetzen des Systems werden die aufgenommenen Noten automatisch aktualisiert.

7. Trans-Funktion

Es stehen insgesamt 13 Stufen zur Verfügung: -6, -5, -4, -3, -2, -1, 0, 1, 2, 3, 4, 5, 6. Im Wiedergabemodus drücken Sie die Trans-Taste, um die Trans-Funktion zu aktivieren. Wählen Sie mit „+“ oder „-“.

8. Tempo-Funktion

Im Performance-Modus drücken Sie die Tempo-Taste, um die Wiedergabeeinstellung zu aktivieren. Steuern Sie die Wiedergabegeschwindigkeit mit „+“ oder „-“.

9. USB-MIDI-Eingang/Ausgang

Verbinden Sie den MIDI-Eingang über USB mit einem Computer oder Tablet für Multimedia-Interaktionen.

10. Metronom Funktion

- Metronom-Zusatzfunktion: Drücken Sie die Taste „Metronome“, um durch die Taktarten zu blättern. Es gibt vier Metronom Varianten: 1/4-, 2/4-, 3/4- und 4/4-Takt.

11. Keyboard-Drum-Funktion

- Drücken Sie die Taste „Drum Kit“, um den Drum-Kit-Sound direkt zu ändern.

12. Sustain-/Vibrato-Funktion

- Drücken Sie die Tasten „Sustain“ und „Vibrato“, um die Sustain- bzw. Vibrato-Funktion zu aktivieren bzw. zu deaktivieren.

13. Pedalfunktion

- Durch Drücken des Sustain-Pedals wird die Sustain-Funktion aktiviert.

14. Ruhemodus

- Wenn während des Betriebs drei Minuten lang keine Aktion erfolgt, erlöschen die LEDs und die Kontrollleuchte. Das System wechselt automatisch in den Ruhemodus. Drücken Sie eine beliebige Taste, um es zu aktivieren.

15. LED-Anzeige

- Die rote LED leuchtet, die rot-grüne Doppel-LED zeigt den Ladezustand an. Ist der eingebaute Lithium-Akku nicht vollständig geladen, schließen Sie das 5-V-USB-Netzteil an, um ihn aufzuladen. Die rote LED leuchtet, sobald der Akku vollständig geladen ist, und wechselt zu grün.

16. Reset-Funktion

- Drücken Sie die Reset-Taste, um das Produkt in den ursprünglichen Zustand zurückzusetzen.

Zubehör 1: Demolisten

NO	name	NO	name
000	By Alice	008	Les premiers sourires de Vanessa
001	Croatian Rhapsody	009	Snowdreams
002	A comme amour	010	Bandari
003	Green Sleeves	011	Castle in the Sky
004	Dream Wedding	012	Song of Joy
005	Romance De Amor	013	Edelweiss
006	Dancing Girl	014	Dance of fireflie
007	CrystlLake	015	

Zubehör 2: Tonlisten

NO	name	NO	name
	Piano	022	Harmonica
000	Piano 1	023	Bandoneon
001	Piano 2		Guitar
002	Piano 3	024	Acoustic Guitar (nylon)
003	Honky-Tonk Piano	025	Acoustic Guitar(steel)
004	Rhodes Piano	026	Electric Guitar (jazz)
005	Chorused Piano	027	Electric Guitar (clean)
006	Harpsichord	028	Electric Guitar (muted)
007	Clavinet	029	Overdriven Guitar
	Percussion	030	Distortion Guitar
008	Celesta	031	Guitar Harmonics
009	Glockenspiel		Bass
010	Music Box	032	Acoustic Bass
011	Vibraphone	033	Electric Bass(finger)
012	Marimba	034	Electric Bass(pick)
013	Xylophone	035	Fretless Bass
014	Tubular Bells	036	Slap Bass 1
015	Santur	037	Slap Bass 2
	Organ	038	Synth Bass 1
016	Hammond Organ	039	Synth Bass 2
017	Percussive Organ		String Solo
018	Rock Organ	040	Violin
019	Church Organ	041	Viola
020	Reed Organ	042	Cello
021	Accordion	043	Contrabass

NO	name	NO	name
044	Tremolo Strings	078	Whistle
045	Pizzicato Strings	079	Ocarina
046	Orchestral Harp		Synthetic tonic
047	Timpani	080	Lead 1 (square)
	Chorus	081	Lead 2 (sawtooth)
048	String Ensemble 1	082	Lead 3 (calliope lead)
049	String Ensemble 2	083	Lead 4 (chiff lead)
050	SynthStrings 1	084	Lead 5 (charang)
051	SynthStrings 2	085	Lead 6 (voice)
052	Choir Aahs	086	Lead 7 (fifths)
053	Voice Oohs	087	Lead 8 (bass+lead)
054	Synth Voice		Synthetic soft tone
055	Orchestra Hit	088	Pad 1 (new age)
	Brass instrument	089	Pad 2 (warm)
056	Trumpet	090	Pad 3 (polysynth)
057	Trombone	091	Pad 4 (choir)
058	Tuba	092	Pad 5 (bowed)
059	Muted Trumpet	093	Pad 6 (metallic)
060	French Horn	094	Pad 7 (halo)
061	Brass Section	095	Pad 8 (sweep)
062	Synth Brass 1		Synthetic effects
063	Synth Brass 2	096	FX 1 (rain)
	Reed instrument	097	FX 2 (soundtrack)
064	Soprano Sax	098	FX 3 (crystal)
065	Alto Sax	099	FX 4 (atmosphere)
066	Tenor Sax	100	FX 5 (brightness)
067	Baritone Sax	101	FX 6 (goblins)
068	Oboe	102	FX 7 (echoes)
069	English Horn	103	FX 8 (sci-fi)
070	Bassoon		Tribal instrument
071	Clarinet	104	Sitar
	Wind instrument	105	Banjo
072	Piccolo	106	Shamisen
073	Flute	107	Koto
074	Recorder	108	alimba
075	Pan Flute	109	Bagpipe
076	Bottle Blow	110	Fiddle
077	Skakuhachi	111	Shanai

NO	name	NO	name
	Percussion		Sound effects
112	Tinkle Bell	120	Guitar Fret Noise
113	Agogo	121	Breath Noise
114	Steel Drums	122	Seashore
115	Woodblock	123	Bird Tweet
116	Taiko Drum	124	Telephone Ring
117	Melodic Tom	125	Helicopter
118	Synth Drum	126	Applause
119	Reverse Cymbal	127	Gun shot

Zubehör 3: Rhythmuslisten

NO	name	NO	name
000	Beguines Wing	026	Char
001	Beguine_2	027	Samba_1
002	Beguine_3	028	Samba_2
003	Pop hit	029	Ubminimal
004	Pop	030	8Bit_1
005	Pop Malay	031	8Bit_2
006	Bossa nova	032	16Bit_1
007	Disco_1	033	16bit_2
008	Disco_2	034	Ballad_16T
009	Blue grass disco	035	Country_16T
010	Waltzl_1	036	Tango_1
011	Waltzl_2	037	Tango_2
012	True ballad waltz	038	Polka_1
013	Bossa Waltz	039	Polka_2
014	Easy Waltz	040	Pop Swing
015	Shuffle Waltz	041	Easy Swing
016	Reggae Waltz	042	Soft Swing
017	Rumba Waltz	043	Rock_1
018	March_1	044	Rock_2
019	March_2	045	Rock_3
020	Rumba_1	046	Airy Rock
021	Rumba_2	047	Heart Rock
022	Slow_1	048	Rock & Roll
023	Slow_2	049	Urban Rock
024	Disco cha cha	050	Ballad
025	Guala cha	051	Jazz Ballad

NO	name	NO	name
052	C.Ballad	090	Square Beat
053	J.Ballad	091	Euro Beat
054	60s Slow Ballad	092	Alpha Dance
055	Piano Ballad	093	Beta Dance
056	50s Ballad	094	Dream Dance
057	Snake Base	095	Dance_1
058	Happy Blues	096	Dance_2
059	Old Blues	097	Dance_3
060	Blue Gras	098	RAP
061	Boodie_1	099	The Country
062	Boodie_2	100	Country Shuffle
063	Boodie_3	101	Electric Keys
064	Shuffle_1	102	Dark Keys
065	Shuffle_2	103	Easy Walk
066	Dream Shuffle	104	Destiny
067	Country Shuffle	105	Comedy
068	Quick Shuffle	106	Drive
069	Reggae Shuffle	107	Liquid Nova
070	R&B	108	Indonesian folk
071	Reggae_1	109	Absolute Music
072	Reggae_2	110	Jamaica
073	Reggae_3	111	Synthesis
074	Salsa_1	112	Feel
075	Salsa_2	113	Accelerate
076	Salsa_3	114	Beach Night
077	Tecno_1	115	Irish
078	Tecno_2	116	Tarantella
079	Funky_1	117	Big band
080	Funky_2	118	Dan
081	Dixie_1	119	Fusion
082	Dixie_2	120	Horse
083	Foxtrot_1	121	Canon
084	Foxtrot_2	122	Latin
085	R.roll_1	123	Mambo
086	R.roll_2	124	New age
087	Fast Beat	125	Slow rc
088	Quick Beat	126	Soul
089	Smooth Beat	127	Twist

IV. Schutz des Roll-Up-Pianos:

1. Das Roll-Up-Piano kann mit einem sauberen, weichen Tuch gereinigt werden.
2. Das Roll-Up-Piano sollte nach Gebrauch ordnungsgemäß aufgerollt und verstaut werden.
3. Nicht an heißen oder feuchten Orten lagern.

V. Vorsichtsmaßnahmen bei der Verwendung des Roll-Up-Pianos:

- Legen Sie das Piano flach hin, verwenden Sie es nicht auf unebenen Flächen und bewegen Sie es während des Gebrauchs nicht, da dies die Funktion beeinträchtigen kann.
- Rollen Sie das Piano nach dem Gebrauch nicht zu fest auf, um die normale Funktion der Tasten nicht zu beeinträchtigen oder die Lebensdauer zu verkürzen.
- Ziehen oder verdrehen Sie die Tasten nicht.
- Legen Sie das Piano nicht an heiße oder feuchte Orte.
- Legen Sie das Piano nicht an heiße oder feuchte Orte.
- Legen Sie das Piano nicht an Orte mit starken elektrischen Wellen, um die Funktion nicht zu beeinträchtigen.

VI. Einfache Fehlerbehebung:

- Wenn der Ton ungewöhnlich ist oder die Tasten nicht richtig funktionieren, schalten Sie bitte das Gerät aus und starten Sie es neu, um die ursprünglichen Einstellungen wiederherzustellen.

Vielen Dank, dass Sie sich für OYAYO entschieden haben!

Lieber Kunde,

Vielen Dank für Ihr Vertrauen und den Kauf unserer Musikinstrumente! Ihre Unterstützung ist die treibende Kraft für unser kontinuierliches Streben nach exzellenter Qualität. Wir bieten Ihnen stets ein hochwertiges Musikerlebnis mit professioneller Einstellung.

Verpflichtung zum Kundendienst

Für dieses Produkt gilt eine 1-jährige Garantie auf das gesamte Gerät (ab Kaufdatum).

Während der Garantiezeit bieten wir bei Qualitätsproblemen, die nicht auf menschliches Verschulden zurückzuführen sind, kostenlose Reparatur oder Ersatz an.

Bitte bewahren Sie den Kaufbeleg als Garantiegrundlage auf.

Kontaktieren Sie uns

Bei Problemen oder Verbesserungsvorschlägen können Sie uns gerne wie folgt kontaktieren:

Offizielle Kundendienst-E-Mail: support@oyayomusic.com

Service-Antwort: Antwort innerhalb von 48 Stunden an Werktagen

Musik bewegt sich dank Ihnen. Wir freuen uns darauf, noch mehr schöne Momente mit Ihnen zu erleben!

OYAYO

Light up the Life with Music

お客様へ

このたびは弊社製品をお選びいただき、誠にありがとうございます。皆様からの信頼とご支援に、心より感謝申し上げます。

弊社ブランドは、15年以上にわたり、電子ピアノ・電子ドラム・電子キーボードなどのポータブル電子楽器の開発・改良に取り組んでまいりました。私たちの使命は、創造性と音楽への探求心を刺激する、革新的かつ高品質なツールを提供することです。

本製品を最大限にご活用いただくために、本取扱説明書に記載の使用方法および注意事項をよくお読みのうえ、正しくお使いくださいますようお願いいたします。それにより、製品の性能を最大限に引き出し、より良い音楽体験をお楽しみいただけます。



本製品が、お客様に喜びと利便性、そして無限の音楽の可能性をもたらすことを心より願っております。ご不明な点やご質問がございましたら、いつでもお気軽に弊社カスタマーサポートまでご連絡ください。迅速かつ丁寧な対応を心がけております。

今後とも弊社製品をどうぞよろしくお願い申し上げます。
さあ、音楽の旅を始めましょう！

I、製品機能の紹介:

- ・ 61/88標準鍵盤（黒鍵を含む）
- ・ フルフィンガー機能
- ・ LEDデジタルディスプレイ
- ・ ティーチングモード
- ・ 音色：128音色
- ・ ビブラート/サステイン/トランス機能
- ・ リズム：128リズム
- ・ USB-MIDI出力
- ・ デモ：15種類のデモ
- ・ サステインペダル
- ・ デモ機能
- ・ MIDI機能
- ・ メトロノーム機能
- ・ 録音/再生機能
- ・ 電源：1. 内蔵バッテリー 3.7V/1100mAh 2. USB 5V/1A

II. 機能ボタンの説明:

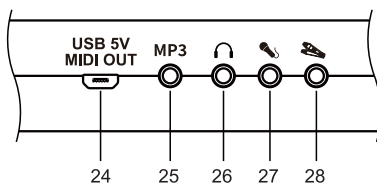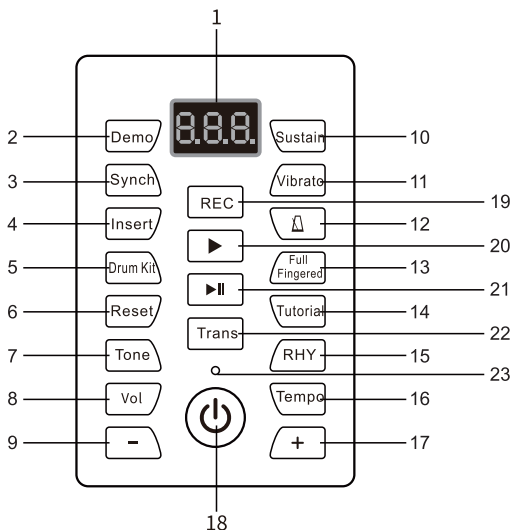

1		LED digital display screen	15	RHY	Rhythm button
2	Demo	Demo button	16	Tempo	Tempo button
3	Synch	Synchronize button	17	+	Increase button
4	Insert	Insert button	18		ON/OFF
5	Drum kit	Drum kit button	19	REC	Record button
6	Reset	Reset button	20		Play button
7	Tone	Tone button	21		Start/Stop button
8	Vol	Volume button	22	Trans	Trans button
9	-	Decrease button	23		LED indicator
10	Sustain	Sustain button	24		USB 5V interface
11	Vibrato	Vibrato button	25		MP3 interface
12		Metronome button	26		Earphone interface
13	Full fingered	Full fingered button	27		MIC interface
14	Tutorial	Teaching button	28		Pedal interface

III. 製品機能の説明:

1. 音色

- ・128音色。
- ・電源投入時に音色を直接選択できます。デフォルト値は000です。「+」または「-」を押して音色を選択します。
- ・その他の機能選択モードでは、パネル上の音色ボタンを押すと音色選択モードに戻ります。

2. 音量

- ・「Volume」ボタンを押し、「+」または「-」をもう一度押すと音量が増減します。デジタルチューブに該当する音量レベルが表示されます。
- ・電源投入時のデフォルトは12レベルで、最大は15レベルです。

3. リズム

128リズム

- ・「Start/Stop」ボタンまたは「RHY」ボタンを押すとリズム再生モードに入り、「Start/Stop」ボタンをもう一度押すと再生が停止します。
- ・「+」または「-」を押してリズムを選択します。
- ・「Synchronize」ボタンを押し、任意のキーをもう一度押すとリズムが再生されます。
- ・「Insert」ボタンを押すと、元のリズムをベースに新しいリズムを挿入できます。

4. デモ

- ・15種類のデモ
- ・「Demo」ボタンを押すと、すべてのデモ曲が再生されます。「Start/Stop」ボタンを押すと再生が停止します。
- ・「+」または「-」ボタンを押してデモを選択します。

5. フルフィンガー

- ・リズムを演奏中に「Full fingered」ボタンを押すと、フィンガーとフルフィンガーのコードモードになります。
- ・コード機能：ベースゾーン、61鍵（C～f#音程で合計19鍵）、88鍵（A2～f#音程で合計34鍵）で、リズムに合わせてコードを演奏します。コードのピッチは鍵盤のピッチに応じて変化します。
- ・コードモードで「Full fingered」ボタンを押すと、コードが閉じられます。

6. 録音機能

- ・「Record」ボタンを押して録音モードに入ると、デジタルチューブに「REC」と表示されます。
- ・録音機能は、マルチチャンネル|リアルタイム録音を使用して音符を録音します。
- ・録音モードに入ると、ユーザーは任意のキーを演奏でき、システムはユーザーが演奏した音符を自動的に録音します。システムが計画した録音ブロックがいっぱいになると、デジタルチューブに「FULL」と表示され、録音がいっぱいであることを示します。
- ・「Play」ボタンを押すと録音した内容を再生できますが、この再生機能は音符が録音された時のみ有効です。再生が終了すると、自動的に元の状態に戻ります。

再生中に、音符を再生してから再度録音することができます。システムがリセットされると、録音された音符は自動的に更新されます。

7. トランス機能

- ・合計13段階（-6、-5、-4、-3、-2、-1、0、1、2、3、4、5、6）です。
演奏モードでは、「Trans」ボタンを押してトランス機能に入り、「+」または「-」で選択します。

8. テンポ機能

- ・パフォーマンスモードでは、「Tempo」ボタンを押して再生調整機能に入り、「+」または「-」で再生速度を調整します。

9. USB MIDI-IN-OUT機能

- ・USB経由でコンピューターまたはタブレットに接続し、マルチメディア操作が可能です。

10. メトロノーム機能

- ・メトロノーム補助機能です。「Metronome」ボタンを押すと拍子が切り替わります。メトロノームには4つのバリエーションがあります。1/4拍子、2/4拍子、3/4拍子、4/4拍子です。

11. キーボードドラム機能

- ・「Drum kit」ボタンを押すと、ドラムキットの音色を直接変更できます。

12. サステイン/ビブラート機能

- ・「Sustain」「Vibrato」ボタンを押すと、サステインまたはビブラート機能がオン/オフになります。

13. ペダル機能

- ・「サステインペダルを踏むと、サステイン機能がオン/オフになります。

14. スリープ機能

- ・使用中に3分間操作がない場合、デジタルチューブライトとインジケータライトが消灯し、システムは自動的にスリープ状態になります。任意のキーを押して復帰してください。

15. LEDインジケーター

- ・赤色のLEDライトは電源動作インジケーター、赤/緑のLEDライトは充電インジケーターです。内蔵リチウム電池が完全に充電されていない場合は、USB 5V電源アダプターを接続して充電してください。赤色のLEDライトが点灯し、電池が完全に充電されると緑色に変わります。

16. リセット機能

- ・リセットボタンを押すと、製品が初期状態に戻ります。

付属品1:デモリスト

NO	name	NO	name
000	By Alice	008	Les premiers sourires de Vanessa
001	Croatian Rhapsody	009	Snowdreams
002	A comme amour	010	Bandari
003	Green Sleeves	011	Castle in the Sky
004	Dream Wedding	012	Song of Joy
005	Romance De Amor	013	Edelweiss
006	Dancing Girl	014	Dance of firefly
007	CrystlLake	015	

付属品2:トーンリスト

NO	name	NO	name
	Piano	022	Harmonica
000	Piano 1	023	Bandoneon
001	Piano 2		Guitar
002	Piano 3	024	Acoustic Guitar (nylon)
003	Honky-Tonk Piano	025	Acoustic Guitar(steel)
004	Rhodes Piano	026	Electric Guitar (jazz)
005	Chorused Piano	027	Electric Guitar (clean)
006	Harpsichord	028	Electric Guitar (muted)
007	Clavinet	029	Overdriven Guitar
	Percussion	030	Distortion Guitar
008	Celesta	031	Guitar Harmonics
009	Glockenspiel		Bass
010	Music Box	032	Acoustic Bass
011	Vibraphone	033	Electric Bass(finger)
012	Marimba	034	Electric Bass(pick)
013	Xylophone	035	Fretless Bass
014	Tubular Bells	036	Slap Bass 1
015	Santur	037	Slap Bass 2
	Organ	038	Synth Bass 1
016	Hammond Organ	039	Synth Bass 2
017	Percussive Organ		String Solo
018	Rock Organ	040	Violin
019	Church Organ	041	Viola
020	Reed Organ	042	Cello
021	Accordion	043	Contrabass

NO	name	NO	name
044	Tremolo Strings	078	Whistle
045	Pizzicato Strings	079	Ocarina
046	Orchestral Harp		Synthetic tonic
047	Timpani	080	Lead 1 (square)
	Chorus	081	Lead 2 (sawtooth)
048	String Ensemble 1	082	Lead 3 (calliope lead)
049	String Ensemble 2	083	Lead 4 (chiff lead)
050	SynthStrings 1	084	Lead 5 (charang)
051	SynthStrings 2	085	Lead 6 (voice)
052	Choir Aahs	086	Lead 7 (fifths)
053	Voice Oohs	087	Lead 8 (bass+lead)
054	Synth Voice		Synthetic soft tone
055	Orchestra Hit	088	Pad 1 (new age)
	Brass instrument	089	Pad 2 (warm)
056	Trumpet	090	Pad 3 (polysynth)
057	Trombone	091	Pad 4 (choir)
058	Tuba	092	Pad 5 (bowed)
059	Muted Trumpet	093	Pad 6 (metallic)
060	French Horn	094	Pad 7 (halo)
061	Brass Section	095	Pad 8 (sweep)
062	Synth Brass 1		Synthetic effects
063	Synth Brass 2	096	FX 1 (rain)
	Reed instrument	097	FX 2 (soundtrack)
064	Soprano Sax	098	FX 3 (crystal)
065	Alto Sax	099	FX 4 (atmosphere)
066	Tenor Sax	100	FX 5 (brightness)
067	Baritone Sax	101	FX 6 (goblins)
068	Oboe	102	FX 7 (echoes)
069	English Horn	103	FX 8 (sci-fi)
070	Bassoon		Tribal instrument
071	Clarinet	104	Sitar
	Wind instrument	105	Banjo
072	Piccolo	106	Shamisen
073	Flute	107	Koto
074	Recorder	108	alimba
075	Pan Flute	109	Bagpipe
076	Bottle Blow	110	Fiddle
077	Skakuhachi	111	Shanai

NO	name	NO	name
	Percussion		Sound effects
112	Tinkle Bell	120	Guitar Fret Noise
113	Agogo	121	Breath Noise
114	Steel Drums	122	Seashore
115	Woodblock	123	Bird Tweet
116	Taiko Drum	124	Telephone Ring
117	Melodic Tom	125	Helicopter
118	Synth Drum	126	Applause
119	Reverse Cymbal	127	Gun shot

付属品3:リズムリスト

NO	name	NO	name
000	Beguines Wing	026	Char
001	Beguine_2	027	Samba_1
002	Beguine_3	028	Samba_2
003	Pop hit	029	Ubminimal
004	Pop	030	8Bit_1
005	Pop Malay	031	8Bit_2
006	Bossa nova	032	16Bit_1
007	Disco_1	033	16bit_2
008	Disco_2	034	Ballad_16T
009	Blue grass disco	035	Country_16T
010	Waltz_1	036	Tango_1
011	Waltz_2	037	Tango_2
012	True ballad waltz	038	Polka_1
013	Bossa Waltz	039	Polka_2
014	Easy Waltz	040	Pop Swing
015	Shuffle Waltz	041	Easy Swing
016	Reggae Waltz	042	Soft Swing
017	Rumba Waltz	043	Rock_1
018	March_1	044	Rock_2
019	March_2	045	Rock_3
020	Rumba_1	046	Airy Rock
021	Rumba_2	047	Heart Rock
022	Slow_1	048	Rock & Roll
023	Slow_2	049	Urban Rock
024	Disco cha cha	050	Ballad
025	Guala cha	051	Jazz Ballad

NO	name	NO	name
052	C.Ballad	090	Square Beat
053	J.Ballad	091	Euro Beat
054	60s Slow Ballad	092	Alpha Dance
055	Piano Ballad	093	Beta Dance
056	50s Ballad	094	Dream Dance
057	Snake Base	095	Dance_1
058	Happy Blues	096	Dance_2
059	Old Blues	097	Dance_3
060	Blue Gras	098	RAP
061	Boodie_1	099	The Country
062	Boodie_2	100	Country Shuffle
063	Boodie_3	101	Electric Keys
064	Shuffle_1	102	Dark Keys
065	Shuffle_2	103	Easy Walk
066	Dream Shuffle	104	Destiny
067	Country Shuffle	105	Comedy
068	Quick Shuffle	106	Drive
069	Reggae Shuffle	107	Liquid Nova
070	R&B	108	Indonesian folk
071	Reggae_1	109	Absolute Music
072	Reggae_2	110	Jamaica
073	Reggae_3	111	Synthesis
074	Salsa_1	112	Feel
075	Salsa_2	113	Accelerate
076	Salsa_3	114	Beach Night
077	Tecno_1	115	Irish
078	Tecno_2	116	Tarantella
079	Funky_1	117	Big band
080	Funky_2	118	Dan
081	Dixie_1	119	Fusion
082	Dixie_2	120	Horse
083	Foxtrot_1	121	Canon
084	Foxtrot_2	122	Latin
085	R.roll_1	123	Mambo
086	R.roll_2	124	New age
087	Fast Beat	125	Slow rc
088	Quick Beat	126	Soul
089	Smooth Beat	127	Twist

IV. ロールアップピアノの保護:

1. ロールアップピアノは、清潔で柔らかいタオルで拭いてください。
2. 使用後は、ロールアップピアノをきちんと巻いて保管してください。
3. 高温多湿の場所に置かないでください。

V. ロールアップピアノの使用上の注意:

- ・使用時は平らな場所に置いてください。平らでない場所で使用しないでください。また、使用中に動かさないでください。機能に影響を与えたり、故障の原因となります。
- ・使用後は、キーの正常な機能を損なったり、寿命を縮めたりしないよう、きつく巻きすぎないでください。
- ・キーを引っ張ったり、ねじったりしないでください。
- ・高温多湿の場所に置かないでください。
- ・高温多湿の場所に置かないでください。
- ・機能に影響を与えないように、電波の強い場所に置かないでください。

VI. 簡単なトラブルシューティング:

- ・音が異常であったり、キーが故障したりした場合は、電源をオフにしてマシンを再起動し、元の設定に戻してください。

OYAYOをお選びいただきありがとうございます。

お客様へ：

この度は当社の楽器をお選びいただき、心より感謝申し上げます。お客様のご支援は、当社が優れた品質を追求し続けるための大きな力となっております。これからもプロフェッショナルな姿勢で、高品質な音楽体験をお届けいたします。

アフターサービスについて

本製品には、全体的に1年間の保証サービスが提供されます（受領日から計算）。保証期間内に人為的要因以外で製品に問題が発生した場合、無料で修理または交換サービスを提供いたします。

保証を受けるために、購入領収書の保管をお願い申し上げます。

お問い合わせ

使用中に問題が発生したり、改善のご提案がある場合は、以下の方法でお気軽にお問い合わせください：

公式アフターサービスメール：support@oyayomusic.com

サービス対応：営業日内に48時間以内に返信いたします。

音楽はあなたのおかげで動きます。あなたと共に、さらに素晴らしい瞬間を創り出すことを楽しみにしております！

OYAYO

Light up the Life with Music